

Whirlpool

بوتجاز

دليل المستخدم

Cooker

User Manual



WR60 EE1 10120 XME

تم إنتاجه بموجب ترخيص. ®/TM/© 2025 Whirlpool.

®/TM/© 2025 Whirlpool. Produced under license

285381705/ AR/ EN/ R.AA/ 13.05.25 16:31
7786587923

شكرا لاختيارك المنتج Whirlpool نحن نريد أن يقدم لك منتجك، المصنوع بجودة وتكنولوجيا عالية، أفضل كفاءة ممكنة. لذلك، يرجى قراءة هذا الدليل بعناية وأية وثائق أخرى مقدمة قبل استخدام المنتج.

ضع في اعتبارك جميع المعلومات والتحذيرات الواردة في دليل المستخدم. فيهذه الطريقة، ستحمي نفسك ومنتجك من الأخطار التي قد تقع.

احتفظ بدليل المستخدم. إذا أعطيت المنتج لشخص آخر، فقدم معه الدليل. تم توضيح شروط الضمان والاستخدام وطرق استكشاف الأخطاء وإصلاحها لمنتجك في هذا الدليل.

قبل استخدام الجهاز، اقرأ تعليمات السلامة التالية. واحتفظ بها في مكان قريب للرجوع إليها في المستقبل.دم:

Beko Europe Management Srl
Via Varesina 204, 20156 Milano, Italy

23	تنظيف لوحة التحكم.....	٤-٩
23	تنظيف الفرن من الداخل (منطقة الطهي).....	٥-٩
23	التنظيف بالبخار السهل.....	٦-٩
24	تنظيف باب الفرن.....	٧-٩
24	إزالة الزجاج الداخلي لباب الفرن.....	٨-٩
25	تنظيف مصباح الفرن.....	٩-٩
26	استكشاف الأخطاء وإصلاحها.....	١٠

جدول المحتويات

4	تعليمات السلامة.....	١
5	الاستخدام المسموح به.....	١-١
5	تثبيت.....	٢-١
5	تخذيرات كهربائية.....	٣-١
6	التنظيف والصيانة.....	٤-١
6	التعليمات البيئية.....	٢
8	منتجك.....	٣
8	مقدمة المنتج.....	١-٣
8	وحدة الطبخ.....	١-١-٣
8	قسم الفرن.....	٢-١-٣
8	مقدمة عن لوحة التحكم بالفرن.....	٢-٣
9	وظائف تشغيل الفرن.....	٣-٣
10	ملحقات المنتج.....	٤-٣
10	استخدام ملحقات المنتج.....	٥-٣
13	المواصفات الفنية.....	٦-٣
14	التركيب.....	٤
14	المكان المناسب للتثبيت.....	١-٤
15	التوصيل الكهربائي.....	٢-٤
16	وضع المنتج.....	٣-٤
16	الاستخدام الأولي.....	٥
16	التنظيف الأولي.....	١٥
17	كيفية استخدام الموقد.....	٦
17	معلومات عامة حول استخدام الموقد.....	١-٦
17	تشغيل المواقد.....	٢-٦
18	استخدام الفرن.....	٧
18	معلومات عامة عن استخدام الفرن.....	١-٧
18	تشغيل وحدة التحكم في الفرن.....	٢-٧
18	معلومات عامة عن الطبخ.....	٨
18	معلومات عامة حول الخبز في الفرن.....	١-٨
19	المعجنات وطعام الفرن.....	١-١-٨
20	اللحوم والأسماك والدواجن.....	٢-١-٨
20	الشواية.....	٣-١-٨
21	اختبر الأطعمة.....	٤-١-٨
22	الصيانة والتنظيف.....	٩
22	معلومات التنظيف العامة.....	١-٩
22	تنظيف الملحقات.....	٢-٩
23	تنظيف الموقد.....	٣-٩

من المهم أن تقرأ وتلاحظ

باستمرار. ولا يجوز للأطفال من سن 8 سنوات فأكثر والأشخاص الذين يعانون من ضعف القدرات البدنية أو الحسية أو العقلية أو قلة الخبرة والمعرفة استخدام هذا الجهاز إلا إذا كانوا تحت الإشراف أو تلقوا تعليمات حول الاستخدام الآمن وفهموا المخاطر المترتبة على ذلك. ويجب ألا يلعب الأطفال بالجهاز. ويجب ألا يقوم الأطفال بتنظيفه وصيانته دون إشراف.

⚠ تحذير: يصبح الجهاز وأجزاؤه التي يمكن الوصول إليها ساخنة أثناء الاستخدام. يجب توخي الحذر لتجنب لمس عناصر التسخين. يجب إبعاد الأطفال الذين تقل أعمارهم عن 8 سنوات ما لم يتم الإشراف عليهم باستمرار

⚠ تحذير: لا تترك الجهاز بدون مراقبة أثناء تخفيف الطعام. إذا كان الجهاز مناسبًا لاستخدام المسبار، فاستخدم فقط مسبار درجة الحرارة الموصى به لهذا الفرن - خطر نشوب حريق.

⚠ تحذير: احرص على إبعاد الملابس أو المواد القابلة للاشتعال الأخرى عن الجهاز حتى تبرد جميع المكونات تمامًا - خطر نشوب حريق. كن دائمًا يقظًا عند طهي الأطعمة الغنية بالدهون أو الزيوت أو عند إضافة المشروبات الكحولية - خطر نشوب حريق. استخدم قفازات الفرن لإزالة المقالي والملحقات. في نهاية الطهي، افتح الباب بحذر، مما يسمح للهواء الساخن أو البخار بالخروج تدريجيًا قبل الوصول إلى تجويف الفرن - خطر نشوب حريق. لا تسد فتحات التهوية الساخنة في مقدمة الفرن - خطر نشوب حريق.

⚠ تحذير: توخى الحذر عند وضع باب الفرن في وضع مفتوح أو لأسفل، لتجنب اصطدام الباب.

قبل استخدام الجهاز، اقرأ تعليمات السلامة التالية. واحتفظ بها في مكان قريب للرجوع إليها في المستقبل. توفر هذه التعليمات والجهاز نفسه تحذيرات أمان مهمة يجب مراعاتها في جميع الأوقات. لا تتحمل الشركة المصنعة أي مسؤولية عن عدم مراعاة تعليمات الأمان هذه أو الاستخدام غير المناسب للجهاز أو ضبط عناصر التحكم بشكل غير صحيح.

⚠ تحذير: يصبح الجهاز وأجزاؤه التي يمكن الوصول إليها ساخنة أثناء الاستخدام. يجب توخي الحذر لتجنب لمس عناصر التسخين. يجب إبعاد الأطفال الذين تقل أعمارهم عن 8 سنوات ما لم يتم الإشراف عليهم باستمرار.

⚠ تحذير: إذا كان سطح الموقد متصدعًا، فلا تستخدم الجهاز - هناك خطر التعرض لصدمة كهربائية.

⚠ تحذير: خطر الحريق: لا تقم بتخزين العناصر على أسطح الطهي.

⚠ حذر: يجب مراقبة عملية الطهي، ويجب مراقبة عملية الطهي القصيرة بشكل مستمر.

⚠ تحذير: إن ترك الموقد دون مراقبة أثناء الطهي باستخدام الدهون أو الزيوت قد يشكل خطرًا على الصحة - خطر نشوب حريق. لا تحاول أبدًا إطفاء حريق بالماء، بل قم بإيقاف تشغيل الجهاز ثم قم بتغطية اللهب بغطاء أو بطانية حريق على سبيل المثال.

⚠ تحذير: لا تستخدم الموقد كسطح عمل أو دعامة. احرص على إبعاد الملابس أو المواد القابلة للاشتعال عن الجهاز، حتى تبرد جميع المكونات تمامًا - خطر نشوب حريق.

⚠ تحذير: يجب إبعاد الأطفال الصغار جدًا (من 0 إلى 3 سنوات) عن الجهاز. ويجب إبعاد الأطفال الصغار (من 3 إلى 8 سنوات) عن الجهاز ما لم يتم الإشراف عليهم

1-1 ⚠️ الاستخدام المسموح به

عن تناول الأطفال - خطر الاختناق. يجب فصل الجهاز عن مصدر الطاقة قبل أي عملية تركيب - خطر التعرض لصدمة كهربائية. أثناء التركيب، تأكد من عدم إتلاف الجهاز لكابل الطاقة - خطر نشوب حريق أو صدمة كهربائية. لا تقم بتنشيط الجهاز إلا بعد اكتمال التركيب.

⚠️ لا تقم بإزالة الجهاز من قاعدة رغوة البوليسترين الخاصة به حتى وقت التثبيت.

⚠️ لا تقم بتثبيت الجهاز خلف باب مزخرف - هناك خطر نشوب حريق.

⚠️ إذا تم وضع المدى على قاعدة، فيجب تسويته وتثبيته على الحائط بواسطة سلسلة التثبيت المتوفرة، لمنع انزلاق الجهاز من القاعدة.

⚠️ تحذير: لمنع انقلاب الجهاز، يجب تركيب سلسلة التثبيت المرفقة. راجع تعليمات التركيب.

3-1 ⚠️ تحذيرات كهربائية

⚠️ هام: يتم توفير المعلومات حول استهلاك التيار والجهد على لوحة التصنيف.

⚠️ توجد لوحة التصنيف على الحافة الأمامية للفرن (يمكن رؤيتها عندما يكون الباب مفتوحاً).

⚠️ يجب أن يكون من الممكن فصل الجهاز عن مصدر الطاقة عن طريق فصله إذا كان القابس في تناول اليد، أو عن طريق مفتاح متعدد الأقطاب مثبت في اتجاه مجرى التيار الكهربائي وفقاً لقواعد الأسلاك ويجب أن يكون الجهاز مؤرضاً وفقاً لمعايير السلامة الكهربائية الوطنية.

⚠️ يجب أن يكون كبل الطاقة طويلاً بما يكفي لتوصيل الجهاز، بمجرد تركيبه في غلافه، بمصدر الطاقة الرئيسي. لا تسحب كبل مصدر الطاقة.

⚠️ لا تستخدم أسلاك تمديد أو مقابس متعددة أو محولات. يجب ألا تكون المكونات الكهربائية في تناول المستخدم بعد التركيب. لا تستخدم الجهاز عندما تكون

⚠️ حذراً: لا يُقصد تشغيل الجهاز عن طريق جهاز تحويل خارجي، مثل المؤقت، أو نظام التحكم عن بعد المنفصل.

⚠️ تم تصميم هذا الجهاز ليتم استخدامه في المنازل والتطبيقات المماثلة مثل: مناطق المطبخ للموظفين في المحلات التجارية والمكاتب وغيرها من بيئات العمل؛ والمنازل الريفية؛ ومن قبل العملاء في الفنادق والموتيلات وأماكن المبيت والإفطار وغيرها من البيئات السكنية. ⚠️ لا يسمح بأي استخدام آخر (على سبيل المثال تدفئة الغرف).

⚠️ هذا الجهاز غير مخصص للاستخدام المهني. لا تستخدمه في الهواء الطلق.

⚠️ لا تقم بتخزين المواد المتفجرة أو القابلة للاشتعال (مثل علب البنزين أو الهباء الجوي) داخل الجهاز أو بالقرب منه - هناك خطر نشوب حريق.

2-1 ⚠️ تثبيت

⚠️ يجب أن يتم التعامل مع الجهاز وتركيبه بواسطة شخصين أو أكثر - خطر الإصابة. استخدم قفازات واقية لفك العبوة وتركيبها - خطر الإصابة بجروح.

⚠️ يجب أن يتم التركيب، بما في ذلك إمداد المياه (إن وجد)، والتوصيلات الكهربائية والإصلاحات بواسطة فني مؤهل. لا تقم بإصلاح أو استبدال أي جزء من الجهاز ما لم يتم ذكر ذلك على وجه التحديد في دليل المستخدم. احرص على إبعاد الأطفال عن موقع التركيب. بعد تفريغ الجهاز من العبوة، تأكد من عدم تعرضه للتلف أثناء النقل. في حالة حدوث مشكلات، اتصل بالوكيل أو أقرب مركز خدمة ما بعد البيع.

بمجرد التركيب، يجب تخزين نفايات التغليف (البلاستيك، وأجزاء البوليسترين وما إلى ذلك) بعيداً

٤-١ ⚠️ التنظيف والصيانة

⚠️ تحذير: تأكد من إيقاف تشغيل الجهاز وفصله عن مصدر الطاقة قبل إجراء أي عملية صيانة؛ لا تستخدم

أبداً معدات التنظيف بالبخار - هناك خطر التعرض لصدمة كهربائية.

⚠️ لا تستخدم المنظفات الكاشطة القاسية أو مكاشط المعادن لتنظيف زجاج الباب لأنها قد تخدش السطح، مما قد يؤدي إلى تحطم الزجاج.

⚠️ لا تستخدم المنتجات الكاشطة أو المسببة للتآكل، أو المنظفات التي تحتوي على الكلور أو الإسفنجيات الكاشطة للأواني.

⚠️ تأكد من أن الجهاز قد بردت قبل تنظيفه أو إجراء الصيانة. - خطر التعرض لحروق.

⚠️ تحذير: قم بإيقاف تشغيل الجهاز قبل استبدال المصباح - خطر التعرض لصدمة كهربائية.

مبلاً أو حافي القدمين. لا تتم بتشغيل هذا الجهاز إذا كان به كابل طاقة أو قابس تالف، أو إذا لم يكن يعمل بشكل صحيح، أو إذا تعرض للتلف أو السقوط.

⚠️ في حالة تلف سلك الطاقة، يجب استبداله بأخر مماثل من قبل الشركة المصنعة أو وكيل الخدمة أو الأشخاص المؤهلين على نحو مماثل لتجنب المخاطر - خطر التعرض لصدمة كهربائية.

⚠️ إذا كان من الضروري استبدال كابل الطاقة، اتصل بمركز خدمة معتمد.

⚠️ تحذير: تأكد من إيقاف تشغيل الجهاز قبل استبدال المصباح لتجنب احتمالية التعرض لصدمة كهربائية.

⚠️ لا يُسمح بالثبيت باستخدام قابس كابل الطاقة إلا إذا كان المنتج مزوداً بالفعل بالقابس المقدم من قبل الشركة المصنعة.

٢ التعليمات البيئية

التخلص من مواد التغليف

استخدمي صواني الخبز المطلية بالورنيش الداكن أو المينا لأنها تمتص الحرارة بشكل أفضل.
سوف يستمر طهي الأطعمة التي تتطلب طهيًا لفترة طويلة حتى عند إيقاف تشغيل الفرن.
تأكد من إغلاق باب الفرن بشكل كامل عند تشغيله وابقه مغلقًا قدر الإمكان أثناء الخبز.

قم بتقطيع الطعام إلى قطع صغيرة ومتساوية الحجم لتقليل وقت الطهي وتوفير الطاقة.

عندما يكون وقت الطهي طويلاً، أكثر من 30 دقيقة، قم بخفض درجة حرارة الفرن إلى أدنى درجة أثناء المرحلة الأخيرة (3-10 دقائق)، بناءً على وقت الطهي الإجمالي. ستستمر الحرارة المتبقية داخل الفرن في طهي الطعام.

إعلانات المطابقة

يتوافق هذا الجهاز مع: متطلبات التصميم البيئي للائحة الأوروبية 65/2014؛ لائحة وضع العلامات على الطاقة 65/2014؛ التصميم البيئي للمنتجات المرتبطة بالطاقة ولوائح معلومات الطاقة (التعديل) (خروج الاتحاد الأوروبي) 2019، بما يتوافق مع المعيار الأوروبي EN 60350-1.

التخلص من الأجهزة المنزلية

هذا الجهاز مصنوع من مواد قابلة لإعادة التدوير أو الاستخدام. تخلص منه وفقاً للوائح المحلية للتخلص من النفايات. لمزيد من المعلومات حول معالجة واستعادة وإعادة تدوير الأجهزة الكهربائية المنزلية، يُرجى التواصل مع السلطة المحلية أو خدمة جمع النفايات المنزلية أو المتجر الذي اشتريته منه الجهاز. هذا الجهاز مُعلَّم وفقاً للتوجيه الأوروبي 2012/19/EU بشأن نفايات المعدات الكهربائية والإلكترونية (WEEE) ولوائح نفايات المعدات الكهربائية والإلكترونية لعام 2013 (بصيغتها المعدلة). بالتخلص من هذا المنتج بشكل صحيح، ستساعد في منع الآثار السلبية على البيئة وصحة الإنسان. يشير رمز  للموجود على المنتج أو على الوثائق المرفقة إلى أنه لا ينبغي التعامل معه كنفايات منزلية، بل يجب نقله إلى مركز تجميع مناسب لإعادة تدوير المعدات الكهربائية والإلكترونية.

نصائح لتوفير الطاقة


قم بتسخين الفرن فقط إذا تم تحديد ذلك في جدول الطبخ أو وصفتك.

يمكن أن يحتوي هذا المنتج على ضوء هالوجين (فئة كفاءة الطاقة G) أو مصدر ضوء LED (فئة كفاءة الطاقة F).



يتوافق هذا الجهاز مع متطلبات التصميم البيئي الواردة في اللائحة الأوروبية 66/2014 ولوائح التصميم البيئي للمنتجات المرتبطة بالطاقة ومعلومات الطاقة (التعديل) (خروج الاتحاد الأوروبي) 2019 مما يتوافق مع المعيار الأوروبي EN 60350-2.

١-١-٣ وحدة الطبخ

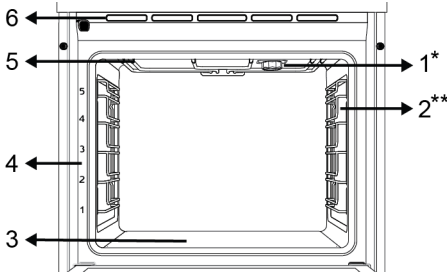


- 1 المصباح
- 2 الأرفف السليكية
- 3 السخان السفلي (أسفل اللوح الفولاذي)
- 4 مواضع الرفوف
- 5 المسخن العلوي
- 6 فتحات تهوية

* يختلف حسب الطراز. قد لا يكون منتج مزودًا بمصباح، أو قد يختلف نوع المصباح وموقعه عن الرسم التوضيحي.

** يختلف حسب الطراز. قد لا يكون منتج مزودًا برف سلكي. يظهر منتج مع رف سلكي في الصورة كمثال.

٢-١-٣ قسم الفرن

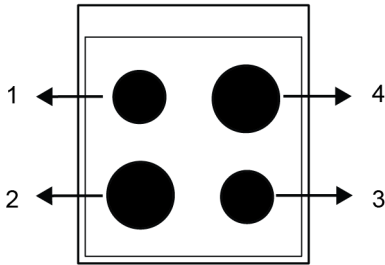


- 1 خلفية يسرى - موقد كهربائي
- 2 أمامية يسرى - موقد كهربائي
- 3 أمامية يمينى - موقد كهربائي
- 4 خلفية يمينى - موقد كهربائي


٢-٣ مقدمة عن لوحة التحكم بالفرن

يمكنك في هذا القسم الاطلاع على نظرة عامة حول لوحة التحكم الخاصة بالمنتج واستخداماتها الأساسية. قد تكون هناك اختلافات في الصور وبعض الميزات اعتمادًا على نوع المنتج.

١-٣ مقدمة المنتج

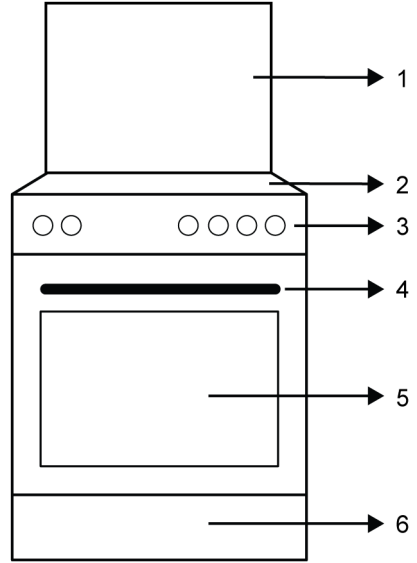

- 1 الغطاء العلوي
- 2 قسم الموقد
- 3 لوحة التحكم
- 4 المقبض
- 5 باب
- 6 الجزء السفلي

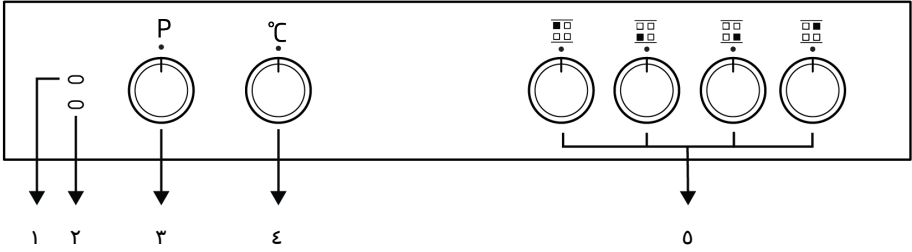

- ٢ مصباح ترموستات
٤ مقبض اختيار درجة الحرارة

- ١ مصباح تحذير الموقد النشط
٣ مقبض اختيار الوظيفية
٥ مقايض التحكم في الموقد

مؤشر درجة الحرارة

يُمكنك معرفة درجة حرارة الفرن الداخلية من مصباح درجة الحرارة. يوجد مصباح درجة الحرارة على لوحة التحكم. يضيء مصباح درجة الحرارة عند بدء تشغيل المنتج، وينطفئ مصباح درجة الحرارة عندما يصل إلى درجة الحرارة المحددة. عندما تنخفض درجة الحرارة داخل الفرن عن درجة الحرارة المحددة، يضيء مصباح درجة الحرارة مرة أخرى.

مقايض التحكم في الموقد

يمكنك تشغيل الموقد باستخدام أزرار التحكم بالموقد. يعمل كل زر على تشغيل لوح التسخين الخاص به. يمكنك استنتاج لوح التسخين الذي يتحكم فيه من الرموز الموجودة على لوحة التحكم.

٣-٣ وظائف تشغيل الفرن

في جدول الوظائف، يتم عرض وظائف التشغيل التي يمكنك استخدامها في الفرن ودرجات الحرارة الأعلى والأدنى التي يمكن ضبطها لهذه الوظائف. قد يختلف ترتيب أوضاع التشغيل الموضحة هنا عن الترتيب في المنتج الخاص بك.

إذا كان هناك مقبض أو مقايض تتحكم في المنتج، ففي بعض الطرز قد يكون هذا المقبض أو هذه المقايض بحيث تخرج عند الضغط عليها (مقايض مدفونة). لإجراء الإعدادات باستخدام هذه المقايض، ادفع المقبض ذي الصلة أولاً إلى الداخل واسحب للخارج. بعد إجراء التعديل، ادفعه مرة أخرى إلى الداخل واستبدل المقبض.

مقبض اختيار الوظيفة

يمكنك تحديد وظائف تشغيل الفرن من خلال مفتاح اختيار الوظيفة. أدر الزر نحو اليسار / اليمين من وضع الغلق (الاتجاه العلوي) لتحديد الوظيفة.


مقبض اختيار درجة الحرارة

يمكنك تحديد درجة الحرارة التي تريد طهيها باستخدام مقبض درجة الحرارة. أدر الزر تجاه عقارب الساعة من وضع الغلق (الاتجاه لعلوي) لتحديد درجة الحرارة.


رمز الوظيفة	وصف الوظيفة	نطاق درجة الحرارة (درجة مئوية)	الوصف والاستخدام
	التسخين العلوي والسفلي	*	يتم تسخين الطعام من أعلى وأسفل في نفس الوقت. مناسب للكيك والمعجنات أو الكعك ويطبخ في قوالب الخبز. يتم الطهي بصينية واحدة.
	التسخين السفلي	*	يتم تشغيل التدفئة المنخفضة فقط. إنه مناسب للأطعمة التي تحتاج إلى تحمير في الأسفل. يجب أيضًا استخدام هذه الوظيفة لتنظيف البحار بسهولة.
	الشواية السفلية	*	الشواية الصغيرة على سقف الفرن تعمل. وهي مناسبة لشوي كميات صغيرة.
	شواية كاملة	*	الشواية الكبيرة على سقف الفرن تعمل. مناسب للشواء بكميات كبيرة.

* يعمل منتحك في نطاق درجة الحرارة المحدد في مقبض درجة الحرارة.

طرز بأرفف سلكية :

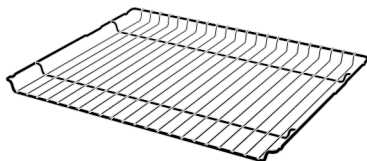

طرز بدون أرفف سلكية :

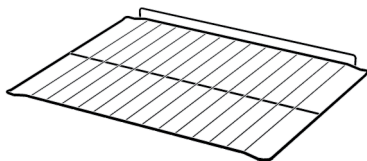

٤-٣ ملحقات المنتج


توجد ملحقات متنوعة في منتحك. تتوفر في هذا القسم وصف الملحقات وأوصاف الاستخدام الصحيح. يختلف الملحق المرفق اعتمادًا على طراز المنتج. قد لا يتوفر في منتحك جميع الملحقات الموصوفة في دليل المستخدم.

قد تتشوه الصواني الموجودة في منتحك بسبب تأثير الحرارة. وليس لهذا تأثير على الوظيفة. ويختفي التشوه عندما تبرد الصينية.



صينية قياسية

يتم استخدامها مع المعجنات والأطعمة الممتدة وقلي القطع الكبيرة.

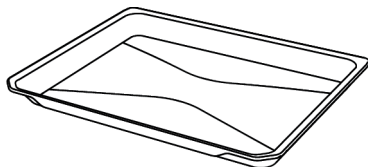


٥-٣ استخدام ملحقات المنتج

أرفف الطبخ

يوجد 5 مستويات لوضع الرف في منطقة الطهي. يمكنك أيضًا رؤية ترتيب الأرفف بالأرقام الموجودة على الإطار الأمامي للفرن.


طرز بأرفف سلكية :

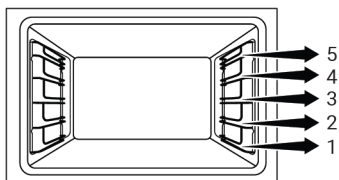

الشواية السلكية


يتم استخدامه للقلي أو وضع الطعام المراد خبزه وقلبه وطيحه على الرف المطلوب.

طرز بدون أرفف سلكية :

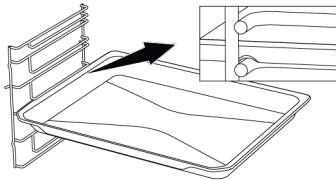

طرز بدون أرفف سلكية :


من الضروري أيضًا وضع الصواني على الرفوف الجانبية بشكل صحيح. يكون للدرج اتجاه واحد عند وضعه على الرف. أثناء وضع الدرج على الرف المطلوب، يجب أن يكون جانبها المصمم للحمل في المقدمة.

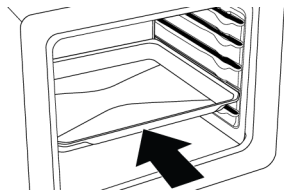


إيقاف وظيفة الشواية السلكية

توجد وظيفة إيقاف لمنع الشواية السلكية من الانقلاب خارج الرف السلكي. باستخدام هذه الوظيفة، يمكنك إخراج طعامك بسهولة وأمان. أثناء إزالة الشواية السلكية، يمكنك سحبها للأمام حتى تصل إلى نقطة التوقف. يجب عليك تجاوز هذه النقطة لإزالتها تمامًا.

طرز بأرفف سلكية :

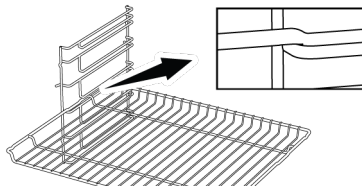


طرز بدون أرفف سلكية :

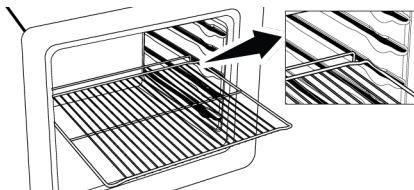

وظيفة إيقاف الدرج - طرز بأرفف سلكية


هناك أيضًا وظيفة إيقاف لمنع الدرج من الانقلاب من الرف السلكي. أثناء إخراج الحاوية، حررها من مقبس الإيقاف الخلفي واسحبها نحوك حتى تصل إلى الجانب الأمامي. يجب عليك تمرير مقبس الإيقاف هذا لإزالته تمامًا.

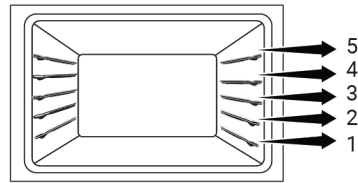

وضع الشواية السلكية على رفوف الطهي


طرز بأرفف سلكية :

من المهم وضع الشواية السلكية على الرفوف الجانبية السلكية بشكل صحيح. عند وضع الشواية السلكية على الرف المطلوب، يجب أن يكون الجزء المفتوح في المقدمة. للحصول على طهي أفضل، يجب تثبيت الشواية السلكية على نقطة توقف الرف السلكي. يجب ألا تتجاوز نقطة التوقف لتلامس الجدار الخلفي للفرن.

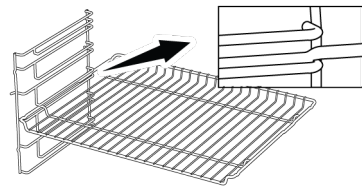

طرز بدون أرفف سلكية :


من المهم وضع الشواية السلكية على الرفوف الجانبية بشكل صحيح، حيث يكون للشواية السلكية اتجاه واحد عند وضعها على الرف، وعند وضع الشواية السلكية على الرف المطلوب، يجب أن يكون القسم المفتوح في المقدمة.

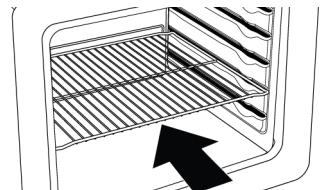

وضع الصينية على أرفف الطهي

طرز بأرفف سلكية :



من الضروري أيضًا وضع الصواني على الأرفف الجانبية السلكية بشكل صحيح. أثناء وضع الدرج على الرف المطلوب، يجب أن يكون جانبها المصمم للحمل في المقدمة. من أجل طهي أفضل، يجب تأمين الصينية على مقبس الإيقاف على الرف السلكي. يجب ألا يمر فوق مقبس الإيقاف لتلامس الجدار الخلفي للفرن.

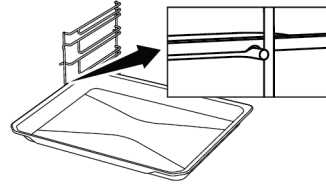

الوضع الصحيح لشبكة الأسلاك والطينية على القضبان

التلسكوبية-طرز بأرفف سلكية وقضبان متداخلة

بفضل القضبان التلسكوبية، يمكن تركيب الصواني أو الأرفف السلكية وإزالتها بسهولة. يجب توخي الحذر عند وضع الصواني والأرفف السلكية على القضبان التلسكوبية كما هو موضح في الشكل أدناه.

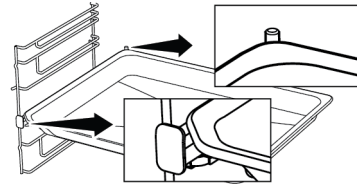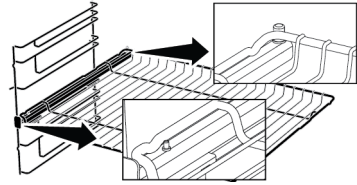

المواصفات العامة	
600/ 600/ 850	الأبعاد الخارجية للمنتج (الارتفاع/ العرض/ العمق) (مم)
1N ~ 220-240 V/3N ~ 380-415 V 50/60 Hz	الجهد الكهربائي/ التردد
H05VV-FG 3 x 4 mm2 (1N) / H05VV-FG 5 x 2,5 mm2 (3N)	نوع الكبل والمقطع المستخدم / مناسبان للاستخدام في المنتج
8,3	إجمالي استهلاك الغاز (ك و)
فرن نقل حراري	نوع الفرن
موقد كهربائي	أمامية يسرى
180 مم	الأبعاد
2000 واط	الطاقة
موقد كهربائي	خلفية يسرى
145 مم	الأبعاد
1000 واط	الطاقة
موقد كهربائي	أمامية يميني
145 مم	الأبعاد
1000 واط	الطاقة
موقد كهربائي	خلفية يميني
180 مم	الأبعاد
2000 واط	الطاقة

الأساسيات: يتم تقديم المعلومات الموجودة على ملصق الطاقة الخاص بالأفران الكهربائية وفقاً للمعيار EN 60350-1 / IEC 60350-1. يتم تحديد هذه القيم تحت الحمل القياسي مع وظائف التدفئة من الأسفل إلى الأعلى أو التدفئة بمساعدة المروحة (إن وجدت).
يتم تحديد فئة كفاءة الطاقة وفقاً للأولوية التالية اعتماداً على وجود الو-1-التسخين الاقتصادي بالمروحة ، 2-التسخين بالمروحة ، 3-الشواية الصغيرة المدعومة بالمروحة ، 4-التسخين العلوي والسفلي.

قد يتم تغيير المواصفات الفنية دون إشعار مسبق لتحسين جودة المنتج.



الأرقام الواردة في هذا الدليل هي أرقام تخطيطية وقد لا تتطابق تمامًا مع منتجك.



يتم الحصول على القيم المذكورة على ملصقات المنتج أو في الوثائق المصاحبة له في ظروف المختبر وفقاً للمعايير ذات الصلة. اعتماداً على الظروف التشغيلية والبيئية للمنتج، قد تختلف هذه القيم.




! معلومات عامة


- استشر أقرب وكيل وكيل تأكد من أن التركيبات الكهربائية والغاز في مكانها قبل الاتصال بوكيل الخدمة المعتمد لتهيئة المنتج للتشغيل. وإذا لم يكن كذلك يرجى الاتصال بالفني المؤهل والمركب للقيام بالتركيبات المطلوبة. يجب أن يقوم وكلاء خدمة معتمدون دائماً بعملية التركيب والإصلاح. لن يتحمل المصنع المسؤولية.
- يرجى ملاحظة أن عملية إعداد الموقع والتركيبات الكهربائية والغاز الخاصة بالمنتج تقع في نطاق مسؤولية العميل.
- يجب تركيب الجهاز وفقاً لكافة لوائح الغاز و/أو الكهرباء المحلية.
- قبل القيام بعملية التركيب، افحص بصرياً المنتج للتأكد من عدم وجود عيوب به.

٤-١ المكان المناسب للتثبيت

- ضع المنتج على سطح صلب بسبب مجاري الهواء الموجودة أسفل المنتج. لا يجب وضعه على قاعدة أو قاعدة. لا يجب أن تغوص أقدام المنتج على الأسطح الناعمة، مثل السجاد وما إلى ذلك.
- يجب أن تكون أرضية المطبخ قادرة على تحمل وزن الجهاز بالإضافة إلى الوزن الإضافي لأواني الطهي وأواني الخبز والطعام.
- هذا المنتج هو جهاز من الفئة 1 وفقاً للمعيار EN 30-1-1. يمكن وضعه بجوار جدران المطبخ أو أثاث المطبخ أو أي منتج آخر بأي بُعد من الخلف ومن أحد الجوانب. لا يجوز أن يكون أثاث المطبخ أو المعدات الموجودة على الجانب الآخر إلا بنفس الحجم أو أصغر.
- يمكن استخدامه مع خزائن على أي من الجانبين ولكن من أجل الحصول على مسافة لا تقل عن 400 مم فوق مستوى اللوحة الساخنة، يجب ترك مسافة جانبية تبلغ 65 مم بين الجهاز وأي جدار أو قسم أو خزانة طويلة.

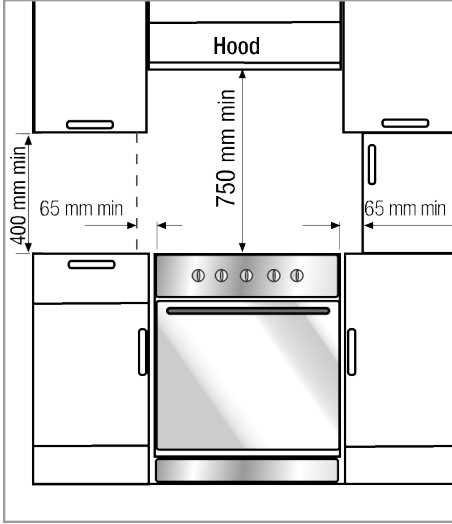

- يمكن استخدامه أيضاً في وضع قائم بذاته. يجب ترك مسافة لا تقل عن 750 مم فوق سطح الموقد.
- إذا كان من المقرر تركيب غطاء الطباخ فوق الطباخ، راجع تعليمات الشركة المصنعة لغطاء الطباخ فيما يتعلق بارتفاع التركيب (650 مم على الأقل).
- يجب أن تكون جميع قطع الأثاث الموجودة بالمطبخ بجوار الجهاز مقاومة للحرارة (100 درجة مئوية على الأقل).

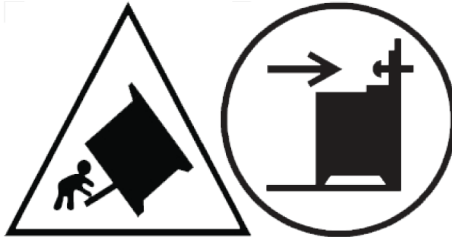

لمنع انقلاب الجهاز، يجب تركيب وسيلة التثبيت هذه. راجع تعليمات التركيب.




سلسلة السلامة

يجب تأمين الجهاز ضد اختلال التوازن باستخدام سلسلة الأمان المرفقة مع الفرن.

إذا كان منتجك يحتوي على سلسلتي أمان؛

قم بربط الحظاف (1) باستخدام وتد مناسب في حائط المطبخ (6) وقم بتوصيل سلسلة الأمان (3) بالخطاف عبر آلية القفل (2).

٢-٤ التوصيل الكهربائي

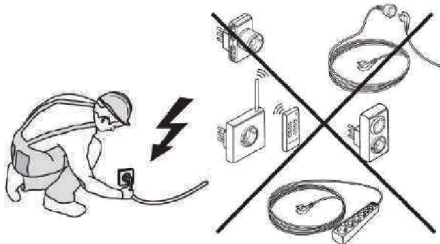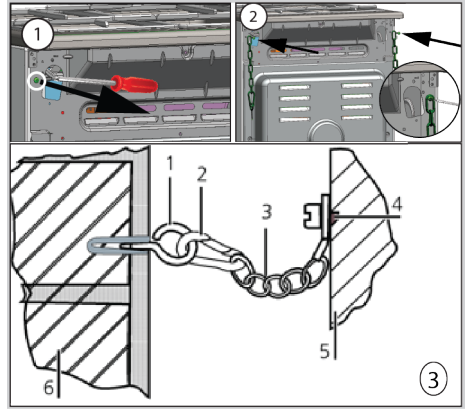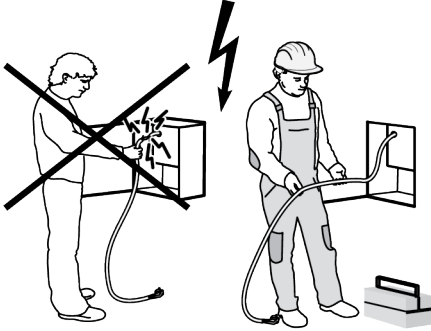

- 1 خطاف
- 2 آلية القفل
- 3 سلسلة السلامة
- 4 قم بتثبيت السلسلة بقوة في الجزء الخلفي للمنتج
- 5 الجزء الخلفي من المنتج
- 6 حائط المطبخ

إذا كان منتجك يحتوي على سلسلة أمان واحدة؛

يجب تأمين الجهاز ضد اختلال التوازن باستخدام سلسلة الأمان المرفقة مع الفرن.

اتبع الخطوات الموضحة في الصورة لتأمين سلسلة الأمان لمنتجك.


- قبل الشروع في أي إجراء من إجراءات التركيب الكهربائي، يُرجى فصل الجهاز من مصدر الإمداد بالتيار الرئيسي. يوجد خطر وقوع صدمة كهربائية!

- قم بتوصيل المنتج بطرف / منفذ أرضي محمي بواسطة دارة إنقاذ مصغرة ذات سعة مناسبة وفقاً لما هو وارد في جدول "المواصفات الفنية". يجب أن يقوم فني كهربائي مؤهل بتركيب الطرف الأرضي أثناء استخدام المنتج سواء بمحول أم لا. لن تتحمل شركتنا المسؤولية عن أية أضرار قد تنتج من استخدام المنتج بدون تركيب طرف أرضي وفقاً للتشريعات المحلية.

- لا يجوز توصيل الجهاز بمزود التيار إلا عبر شخص مفوض ومؤهل. لا تبدأ فترة ضمان الجهاز سوى بعد التثبيت الصحيح. لن يتحمل المصنع المسؤولية عن أية أضرار تنتج من قيام أشخاص غير معتمدين بأي من هذه الإجراءات.

- يجب ألا يكون أنبوب الأمان مثبتاً أو منثنياً أو موضوعاً بحيث يعيق الحركة أو ملاصقاً للأجزاء الساخنة بالجهاز. لا بد من استبدال كابل الطاقة التالف من خلال فني كهربائي مؤهل. وإلا، فهناك خطر حدوث صدمة كهربائية، أو ماس كهربائي، أو حرق!

- يجب أن تتوافق بيانات مصدر الإمداد بالتيار الرئيسي مع البيانات المحددة على ملصق النوع بالمنتج. يمكن مشاهدة بطاقة التصنيف عندما يكون الباب مفتوحاً أو عندما يكون الغطاء السفلي مفتوحاً أو قد

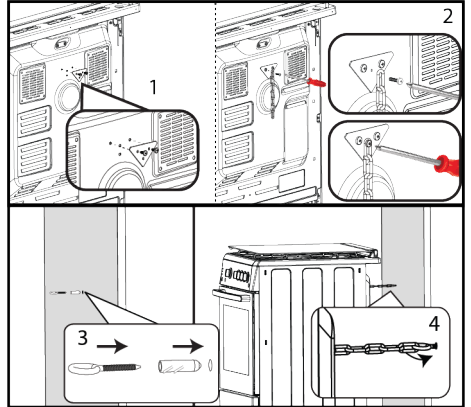

يجب أن تكون سلسلة الثبات قصيرة قدر الإمكان لتجنب إمالة الفرن للأمام وقطرية لتجنب إمالة الفرن من الجانب. تم تصميم سلسلة الثبات لأفران الطهي التي لا تحتوي على فتحة تثبيت للقفوس.



إذا كان نوع سلك الإمداد لديك من النوع ثلاثي الموصلات، للتوصيل أحادي الطور:

- بني/أسود = L (مرحلة)

- أزرق = N (حيادي)

- السلك الأخضر/الأصفر = (E) (التأريض)

إذا كان نوع سلك الإمداد لديك من النوع المكون من 5 موصلات، للتوصيل ثلاثي الطور:

- بني = L1 (مرحلة)

- أسود = L2 (مرحلة)

- رمادي = L3 (مرحلة)

- أزرق = N (حيادي)

- السلك الأخضر/الأصفر = (E) (التأريض)

٣-٤ وضع المنتج

1. ادفع المنتج نحو حائط المطبخ.
2. قم بتأمين سلسلة الأمان التي قمت بتوصيلها بالمنتج بالحائط.

3. ضبط أقدام الفرن

ضبط أقدام الفرن

قد تتسبب الاهتزازات أثناء الاستخدام في تحرك أواني الطهي. يمكن تجنب هذا الموقف الخطير إذا كان المنتج مستويًا ومتوازنًا.

من أجل سلامتك، يرجى التأكد من أن المنتج مستوي عن طريق ضبط الأرجل الأربعة في الأسفل عن طريق الدوران إلى اليسار أو اليمين ومحاذة المستوى مع سطح العمل.

الفحص النهائي


1. أعد توصيل المنتج بالتيار الكهربائي.
2. تحقق من تشغيل الوظائف.

توجد بطاقة التصنيف في الجدار الخلفي للوحدة وذلك حسب نوع الوحدة. يجب أن يتوافق كابل الطاقة الخاصة بالمنتج مع القيم الموضحة في جدول المواصفات الفنية.

- أثناء توصيل الأسلاك الكهربائية، يجب أن تلتزم باللوائح المحلية والوطنية السارية، وينبغي أن تستخدم مأخذ التوصيل / الخط والقياس المناسب للفرن. في حالة تجاوز حدود طاقة المنتج للقدرة الكهربائية لمأخذ التوصيل / المقبس / الخط، يجب توصيل المنتج من خلال تركيب كهربائي ثابت مباشرةً بدون استخدام مأخذ ال
- إذا كان المنتج متصلًا مباشرةً بمصدر الطاقة: إذا كان من غير الممكن فصل جميع الأقطاب من مصدر الإمداد بالطاقة، فيجب توصيل وحدة فصل مع وجود خلوص تلامس قدره 3 ملم كحد أدنى (وحدات المنصهر، ومفاتيح أمان الخط، ومفاتيح التحكم في التيار) ويجب أن تكون جميع الأقطاب في وحدة الفصل هذه مجاورة (وليس فوق) للمنتج وفقًا لتوجيهات مؤسسة المهندسين الكهربائيين (IEEE). قد يتسبب عدم مراعاة هذه الإرشادات في حدوث مشكلات في التشغيل مع إبطال ضمان هذا المنتج.
- تعد الحماية الإضافية التي يوفرها قاطع دائرة الكهرباء الزائدة أمرًا موصى به.

إذا تم إنتاج المنتج بكابلات ودون قابس

وصِّل سلك المنتج بمصدر الطاقة كما هو موضح فيما يلي:

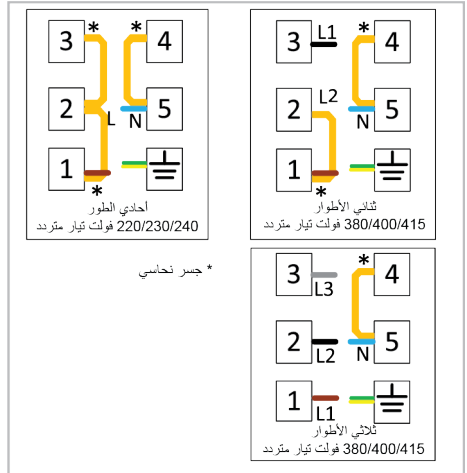

٥ الاستخدام الأولي

قبل البدء في استخدام منتجك، يوصى بإجراء ما يلي في الأقسام التالية على التوالي.

3. شغّل المنتج لمدة 30 دقيقة ثم أوقف تشغيله. بهذه الطريقة، يتم حرق البقايا والطبقات التي قد تكون متبقية في الفرن أثناء الإنتاج وتنظيفها.
4. ينبغي عند تشغيل المنتج تحديد أعلى درجة حرارة ووظيفة التشغيل التي تعمل بما جميع السخانات في منتجك. انظر "وظائف تشغيل الفرن" يمكنك معرفة كيفية تشغيل الفرن في القسم التالي.
5. انتظر حتى يبرد الفرن.

١-٥ التنظيف الأولي

1. أزل جميع مواد التعبئة والتغليف.
2. أزل جميع الملحقات المقدمة داخل المنتج من الفرن.

ملاحظة: أثناء الاستخدام الأول، قد يصدر دخان ورائحة لعدة ساعات. هذا أمر طبيعي ويحتاج فقط إلى تهوية جيدة لإزالته. تجنب استنشاق الدخان والروائح التي تتشكل مباشرة.

6. امسح أسطح المنتج باستخدام قطعة قماش مبللة أو إسفنجة وجفنها بقطعة قماش.


قبل استخدام الملحقات؛

نظف الملحقات التي تزيلها من الفرن بماء ومنظف وإسفنجة تنظيف ناعمة.

٦ كيفية استخدام الموقد

٦-١ معلومات عامة حول استخدام الموقد

• امتنع عن استخدام الأواني غير المتوازنة والقابلة للانقلاب بسهولة على الموقد.



• امتنع عن تسخين الأواني فارغة. فقد تلف الأواني والجهاز.
• غلق ألواح التسخين بعد كل استخد.
• إذا قمت بتشغيل ألواح التسخين بدون الأواني والأواني، فسوف تلف المنتج. أغلق ألواح التسخين بعد كل استخد.


- بعد كل استخدام، سيكون سطح الطهي ساخناً، لذا تجنب وضع الأواني/المقالي البلاستيكية على سطح الطهي. قم بتنظيف مثل هذه المواد على السطح على الفور.
- قد تسبب التغيرات المفاجئة في درجة الحرارة على سطح الطهي الزجاجي في حدوث تلف، لذا احذر من انسكاب السوائل الباردة أثناء الطهي.
- ضع كمية مناسبة من الطعام في القدور والمقالي. بهذه الطريقة، لن تضطر إلى التنظيف دون داع عن طريق منع فائض الطعام.
- امتنع عن وضع أغطية الأواني على الشعلات/المناطق.
- ضع المقالي في وسط ألواح التسخين. عندما تزيد وضع الموقد على لوح تسخين آخر، ارفعه وضعه على لوح التسخين الذي تريده بدلاً من تحريكه..

أحجام صينية الخبز الموصى بها

قطر منطقة الطهي - مم	قطر القدر - سم
80	10 - 8
145	16 - 14
180	20 - 18
220	24 - 22

٦-٢ تشغيل الموقد

استخدام لوح (ألواح) التسخين

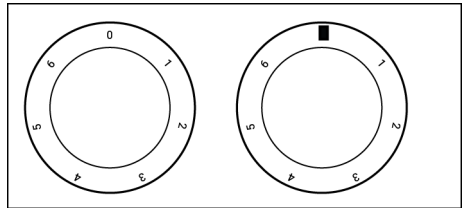

يمكنك تشغيل لوح (ألواح) التسخين بمقبض (مقابض) التحكم في الموقد. كل مقبض يشغل لوح التسخين ذي الصلة. يمكنك الاستدلال على اللوح الساخن الذي يتحكم فيه من الرموز الموجودة على لوحة التحكم.

عند إيقاف التشغيل (الوضع العلوي)، لا يعمل لوح التسخين. اضبط مستوى الطهي الذي تريده عن طريق محاذاة المقبض للمستويات المعنية. قد يكون للموقد (المواقد) مستويات تشغيل مختلفة وفقاً لطراز جهازك. يمكنك تحديد المستوى المناسب لنوع الطهي الخاص بك بالرجوع إلى الجدول أدناه.

6 مستويات:

1: التسخين

2 - 3: الغليان

4 - 6: الخبز، القلي، الغليان

مصباح تحذير الموقد النشط

بمجرد تشغيل لوح (ألواح) التسخين، يضيء مصباح التحذير الخاص بالموقد النشط الموجود على لوحة التحكم. يشير هذا المصباح إلى تشغيل لوح التسخين أو على الأقل أحد ألواح التسخين الخاصة به، إن وجدت. عندما يتم إيقاف تشغيل جميع المقابض الموجودة على لوح (ألواح) التسخين، ينطفئ المصباح.

تشغيل لوح التسخين:

لتشغيل ألواح التسخين، يتم استخدام مقابض التحكم في الموقد. للحصول على مستوى الطهي المطلوب، قم بتبديل مقبض التحكم في الموقد إلى المستوى المطلوب.

إيقاف تشغيل لوحة التسخين:

ضع مقبض التحكم في الموقد إلى وضع إيقاف التشغيل (أعلى).

استخدام ألواح التسخين

يمكن تدوير مقايض موقد لوح التسخين في كلا الاتجاهين لضمان التحكم في الحرارة الذي يختلف حسب المستويات.

إذا كانت هناك ألواح تسخين مزودة بخاصية التسخين السريع، يتم تمييزها بنقطة حمراء.



الحماية من فرط التسخين

تم تجهيز المسطحات التي تزيد قوتها عن 1000W في الساعة بحماية من الحرارة الزائدة. تقلل الحماية من السخونة الزائدة من قوة لوح التسخين في الظروف التالية:

- لا أو أوي أو أوعية على لوح التسخين.
- وعاء فارغ أو وعاء على لوح التسخين.
- كون قاعدة الإناء أو الوعاء ليست مسطحة.

٧ استخدام الفرن

١-٧ معلومات عامة عن استخدام الفرن

مروحة التبريد (يختلف اعتمادًا على طراز المنتج. وقد لا يكون متاحًا مع المنتج الخاص بك.)

يحتوي منتجك على مروحة تبريد. تُنشط مروحة التبريد تلقائيًا عندما يلزم وتُبرد كل من مقدمة المنتج والأثاث. ويُغى تنشيطها تلقائيًا عند انتهاء عملية التبريد. يخرج الهواء الساخن عبر باب الفرن. امتنع عن تعظية فتحات التهوية هذه. وإلا، قد يسخن الفرن بشدة. تستمر مروحة التبريد في العمل أثناء تشغيل الفرن أو بعد إيقاف تشغيله (20-30 دقيقة تقريبًا). في حالة الطهي ببرمجة مؤقت الفرن، يتم إيقاف تشغيل مروحة التبريد مع جميع الوظائف الأخرى في نهاية وقت الطهي. ولا يمكن للمستخدم تحديد وقت تشغيل مروحة التبريد. فهي تعمل وتتوقف عن العمل تلقائيًا. ولا يمثل ذلك خطأ.

إضاءة الفرن

يتم تشغيل إضاءة الفرن عندما يبدأ الفرن في الطهي. يتم تشغيل الإضاءة في بعض الطراز أثناء الطهي، ويتم إيقاف تشغيلها في طراز أخرى بعد فترة معينة.

٢-٧ تشغيل وحدة التحكم في الفرن

تشغيل الفرن

يبدأ الفرن في العمل عند تحديد وظيفة التشغيل التي تريدها من خلال مقبض اختيار الوظيفة، مع ضبط درجة حرارة معينة باستخدام مقبض ضبط درجة الحرارة.

٨ معلومات عامة عن الطبخ

يمكنك العثور على نصائح حول تحضير وطهي طعامك في هذا القسم. علاوة على ذلك، يصف هذا القسم بعض الأطعمة التي تم اختيارها كمنتجات وأنسب الإعدادات لهذه الأطعمة. ويُشار أيضًا إلى إعدادات وملحقات الفرن المناسبة لهذه الأطعمة.

١-٨ معلومات عامة حول الخبز في الفرن


• قد ينبعث بخار ساخن يُسبب الإصابة بحروق عند فتح باب الفرن أثناء الطهي أو بعده. فقد يحرق البخار يدك و/أو وجهك و/أو عينيك. لذا فعند فتح باب الفرن، ابق بعيدًا.

إيقاف تشغيل الفرن

يمكنك إيقاف تشغيل الفرن عن طريق إدارة مقبض اختيار الوظيفة ودرجة الحرارة إلى وضع الإيقاف (الاتجاه العلوي).

اختيار درجة الحرارة ووظيفة تشغيل الفرن.

يمكنك الطهي عن طريق التحكم اليدوي (تحت سيطرتك) عن طريق تحديد درجة الحرارة ووظيفة التشغيل الخاصة بطعامك.

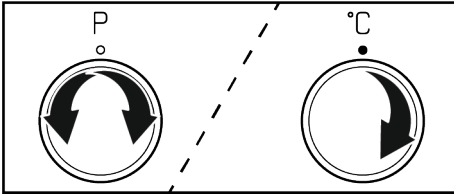

1. حدد وظيفة التشغيل التي تريد طهيها باستخدام مقبض اختيار الوظيفة.

2. اضبط درجة الحرارة التي تريد طهيها باستخدام مقبض درجة الحرارة.

↳ سيبدأ فرنك في العمل فورًا بالوظيفة المحددة ودرجة الحرارة،

وسيصبح مصباح منظم درجة الحرارة. عندما تصل الحرارة داخل الفرن إلى الدرجة المحددة، سيتم إيقاف تشغيل مصباح الترموستات. لن ينطفئ الفرن من تلقاء نفسه بعد عملية الطهي. فعليك التحكم في الطهي وإيقاف تشغيله بنفسك. عند اكتمال الطهي، قم بإيقاف تشغيل الفرن عن طريق إدارة مقبض اختيار الوظيفة ومقبض درجة الحرارة إلى وضع الإيقاف (لأعلى).

- قد يتسبب البخار المكثف المتولد أثناء الطهي في تكوين قطرات ماء مكثفة على الجزء الداخلي والخارجي للفرن وعلى الأجزاء العلوية من الأثاث نظرًا لاختلاف درجة الحرارة. وهذا أمر طبيعي وفيزيائي.
- قد يظهر التكثيف أو بخار الماء على شكل تعرق أو تنقيط على الزجاج الداخلي للفرن، وذلك حسب نوع الطعام. وقد يحدث هذا الأمر بشكل شائع أثناء الطهي. يُصح باستخدام قطعة قماش مبللة لمسح الزجاج الداخلي بعد أن يبرد المنتج بعد الطهي.
- قد تختلف قيم درجة حرارة الطهي والوقت المحددة للأطعمة حسب الوصفة والكمية. ولهذا السبب، توفر هذه القيم في صورة نطاقات.

- أزل دوماً الملحقات غير المستخدمة من الفرن قبل بدء عملية الطهي.
- فقد تمنع الملحقات التي ستبقى في الفرن طهي طعامك بالقيم الصحيحة.
- بالنسبة للأطعمة التي ستطهونها وفقاً لوصفتك الخاصة، يمكنك الرجوع إلى الأطعمة المماثلة الواردة في جداول الطهي.
- إن استخدام الملحقات المرفقة يضمن لك الحصول على أفضل أداء للطهي. احرص دائماً على اتباع المعلومات المقدمة من قبل الشركة المصنعة لأواني الطهي الخارجية التي ستستخدمها.
- اقطع الورقة المقاومة للشحوم التي ستستخدمها في عملية الطهي بأحجام مناسبة للإناء الذي ستستخدمه للطهي. يمكن أن تتسبب الأوراق المقاومة للشحوم الزائدة المتدلية من الإناء في خطر الإصابة بحروق وتؤثر كذلك على جودة الطهي. استخدم الورقة المقاومة للشحوم التي ستستخدمها في نطاق درجة الحرارة المحدد.
- للحصول على أداء طهي جيد، ضع طعامك على الرف الصحيح الموصى به. تجنب تغيير موضع الرف أثناء الطهي.

١-٨-١ المعجنات وطعام الفرن

معلومات عامة

- نوصي باستخدام ملحقات المنتج للحصول على أداء طهي جيد. وإذا كنت تستخدم أواني طهي خارجية، يُفضل استخدام أواني داكنة وغير لاصقة ومقاومة للحرارة.
- إذا كان يوصى بالتسخين المسبق في جدول الطهي، تأكد من وضع طعامك في الفرن بعد التسخين المسبق.
- إذا كنت ستطهي باستخدام أواني الطهي على الشواية السلكية، فضعها في منتصف الشواية السلكية، وليس بالقرب من الجدار الخلفي.
- يجب أن تكون جميع المواد المستخدمة في صنع المعجنات طازجة وفي درجة حرارة الغرفة.
- وقد تختلف حالة طهي المنتجات اعتماداً على كمية الطعام وحجم أواني الطهي.
- تعمل القوالب المعدنية والسيراميك والزجاجية على إطالة وقت الطهي ولا يتم تحمير الأسطح السفلية لأطعمة المعجنات بشكل متساوٍ.

نصائح لخبز الكعك

- إذا كانت الكعكة جافة جداً، فارفع درجة الحرارة بمقدار 10 درجات مئوية وقل وقت الخبز.
- إذا كانت الكعكة رطبة، فاستخدم كمية صغيرة من السائل أو قلل درجة الحرارة بمقدار 10 درجات مئوية.
- إذا تعرض الجزء العلوي من الكعكة لحرق، فضعه على الرف السفلي، وانخفض درجة الحرارة وقل وقت الخبز.
- إذا تم طهي الكيك من الداخل جيداً، ولكن الخارج كان غير ناضجاً، فاستخدم كمية أقل من السائل، وقلل درجة الحرارة وزد وقت الطهي.

نصائح للمعجنات

- إذا كانت المعجنات جافة جداً، فقم بزيادة درجة الحرارة بمقدار 10 درجات مئوية وانخفض وقت الطهي. بلل أوراق العجين بصلصة تتكون من مزيج الحليب، والزيت، والبيض واللبن الرايب.
- في حالة طهي المعجنات ببطء، فتأكد من أن سمك المعجنات التي قد قمت بتخضيرها لا تفيض بالصينية.
- إذا كانت المعجنات بنية اللون على السطح ولكن لم يتم طهي الجزء السفلي، فتأكد من أن كمية الصلصة التي ستستخدمها في المعجنات ليست كثيرة جداً في أسفل المعجنات. للحصول على تحمير متساوٍ، حاول توزيع الصلصة بالتساوي بين أوراق العجين والمعجنات.
- اخبز معجناتك في الموضع ودرجة الحرارة المناسبين لجدول الطهي. إذا كان الجزء السفلي غير محمر بدرجة كافية، فضعه على رف سفلي للطهي التالي.

جدول الطهي للمعجنات والطعام المطهي في الفرن

الطعام	الملح الذي يجب استخدامه	وظيفة التشغيل	موضع الرف	درجة الحرارة (درجة مئوية)	وقت الخبز (دقيقة) (تقريباً)
كيك بالصينية	صينية قياسية*	التسخين العلوي والسفلي	3	180	30 ... 45
كيك في قالب	قالب كعك على الشواية السلكية**	التسخين العلوي والسفلي	2	180	30 ... 50
كعك صغير	صينية قياسية*	التسخين العلوي والسفلي	3	160	25 ... 35
الكيك الإسفنجي	قالب كيك مستدير، بقطر 26 سم مع مشبك بالشواية السلكية**	التسخين العلوي والسفلي	2	160	30 ... 45
البسكويت	صينية للمعجنات*	التسخين العلوي والسفلي	3	170	25 ... 40
القطائر	صينية قياسية*	التسخين العلوي والسفلي	2	200	30 ... 45
خبز البن	صينية قياسية*	التسخين العلوي والسفلي	2	200	20 ... 35

الطعام	الملح الذي يجب استخدامه	وظيفة التشغيل	موضع الرف	درجة الحرارة (درجة مئوية)	وقت العجز (دقيقة) (تقريبًا)
خبز كامل	صينية قياسية*	التسخين العلوي والسفلي	3	200	45 ... 30
لازانيا	وعاء زجاجي / معدني بالشواية السلكية**	التسخين العلوي والسفلي	2 أو 3	200	45 ... 30
قطرة التفاح	قالب معدني أسود مستدير، قطر 20 سم على الشواية السلكية**	التسخين العلوي والسفلي	2	180	75 ... 60
البيتزا	صينية قياسية*	التسخين العلوي والسفلي	2	220	25 ... 10

يُوصى بالتسخين المسبق لكافة الأطعمة.

*قد لا يتم توفير هذه الملحقات مع منتجك.

**لا يتم توفير هذه الملحقات مع منتجك. وهذه الملحقات متاحة تجاريًا.

٨-٢ اللحوم والأسماك والدواجن

النقاط الرئيسية بشأن الشواء

- اترك اللحم في الفرن بعد انتهاء وقت الطهي لمدة 10 دقائق تقريبًا. يتم توزيع عصير اللحم بشكل أفضل على اللحم المخمر ولا يخرج عند تقطيع اللحم.
- يجب وضع الأسماك على رف متوسط أو منخفض في طبق مقاوم للحرارة.
- قم بطهي الأطباق الموصى بها في جدول الطهي باستخدام صينية واحدة.

جدول الطهي للحوم والأسماك والدواجن

- إن التتبيل باستخدام عصير الليمون والفلفل قبل طهي جميع قطع الدجاج والديك الرومي وقطع اللحم الكبيرة من سيزيد من أداء الطهي.
- يستغرق طهي اللحم منزوع العظام ما بين 15 إلى 30 دقيقة أكثر من قبله بالقلي.
- يجب أن تحسب حوالي 4 إلى 5 دقائق من وقت الطهي لكل سنتيمتر من سمك اللحم.

الطعام	الملح الذي يجب استخدامه	وظيفة التشغيل	موضع الرف	درجة الحرارة (درجة مئوية)	وقت العجز (دقيقة) (تقريبًا)
شرائح لحم (كاملة) / شواء (1 كجم)	صينية قياسية*	التسخين العلوي والسفلي	3	15 دقائق /حد أقصى، بعد 180 ... 190	80 ... 60
عرقوب الضأن (2-1,5 كجم)	صينية قياسية*	التسخين العلوي والسفلي	3	15 دقائق /حد أقصى، بعد 170	120 ... 110
دجاج مقلي (2-1,8 كجم)	الشواية السلكية* ضع صينية واحدة على رف سلكي	التسخين العلوي والسفلي	2	15 دقائق /250 max, بعد 190	90 ... 70
ديك رومي (5.5 كجم)	صينية قياسية*	التسخين العلوي والسفلي	1	25 دقائق /حد أقصى، بعد 180 ... 190	210 ... 150
الأسماك	الشواية السلكية* ضع صينية واحدة على رف سلكي	التسخين العلوي والسفلي	3	200	40 ... 20

يُوصى بالتسخين المسبق لكافة الأطعمة.

*قد لا يتم توفير هذه الملحقات مع منتجك.

**لا يتم توفير هذه الملحقات مع منتجك. وهذه الملحقات متاحة تجاريًا.

معلومات عامة

- أغلق باب الفرن أثناء الشواء. لا تستخدم الشواية أبدًا مع فتح باب الفرن.

النقاط الرئيسية للشواية

- قم بتحضير أطعمة ذات سمك ووزن متشابهين قدر الإمكان للشواية.

٨-٣ الشواية

تتحول للحوم الحمراء والأسماك ولحوم الدواجن إلى اللون البني بسرعة عند شويها، وتحمّل قشرة جميلة ولا تجف. تعتبر حوم الفيليه، واللحوم المشوية، والتفانق والخضروات كثير العصارة (الطماطم، والبصل، وغيرها) مناسبة بشكل خاص للشواء.

- ضع القطع المراد شويها على الشواية السلكنية أو صينية الشواية السلكنية إلى المستوى المطلوب في الفرن. إذا كنت تطهي على الشواية السلكنية، قم بتحريك صينية الفرن إلى الرف السفلي لتجميع الزيوت. يجب تحديد حجم صينية الفرن التي سيتم تحريكها لتغطية منقطة الشواء بالكامل. قد لا يتم تضمين هذه الصينية مع المنتج. ضع بعض الماء في صينية الفرن لسهولة التنظيف.
- ضع القطع المراد شويها على الشواية السلكنية أو صينية الشواية السلكنية عن طريق توزيعها دون تجاوز أبعاد جهاز التسخين.
- اعتماداً على سمك القطع المراد شويها، قد تختلف أوقات الطهي الواردة في الجدول.

جدول الشواء

الطعام	الملح الذي يجب استخدامه	موضع الرف	درجة الحرارة (درجة مئوية)	وقت الخبز (دقيقة) (تقريباً)
الأحماك	الشواية السلكنية	4 - 5	250	20 ... 25
قطع الدجاج	الشواية السلكنية	4 - 5	250	25 ... 35
كرات اللحم (لحم العجل) - 12 الكمية	الشواية السلكنية	4	250	20 ... 30
قطع لحم شأن	الشواية السلكنية	4 - 5	250	20 ... 25
شرائح لحم - (مكعبات لحم)	الشواية السلكنية	4 - 5	250	25 ... 30
قطع لحم العجل	الشواية السلكنية	4 - 5	250	25 ... 30
خضروات محمص	الشواية السلكنية	4 - 5	220	20 ... 30
خبز محمص	الشواية السلكنية	4	250	1 ... 4

يُوصى بالتسخين المسبق لمدة 5 دقائق لكافة الأطعمة المشوية.

اقلب قطع الطعام بعد مرور نصف 1/2 وقت الشواء.

- قم بطهي الأطباق الموصى بها في جدول الطهي باستخدام صينية واحدة.

جدول الطهي لاختبار الأطعمة

الطعام	الملح الذي يجب استخدامه	وظيفة التشغيل	موضع الرف	درجة الحرارة (درجة مئوية)	وقت الخبز (دقيقة) (تقريباً)
كعكة الغريبة (كعك حلوى)	صينية قياسية *	التسخين العلوي والسفلي	3	140	20 ... 30
كعك صغير	صينية قياسية *	التسخين العلوي والسفلي	3	160	25 ... 35
الكيك الإسفنجي	قالب كيك مستدير، بقطر 26 سم مع مشبك بالشواية السلكنية **	التسخين العلوي والسفلي	2	160	30 ... 45
قطعة التفاح	قالب معدني أسود مستدير، قطر 20 سم على الشواية السلكنية **	التسخين العلوي والسفلي	2	180	60 ... 75

يُوصى بالتسخين المسبق لكافة الأطعمة.

* قد لا يتم توفير هذه الملحقات مع منتجك.

** لا يتم توفير هذه الملحقات مع منتجك. وهذه الملحقات متاحة تجارياً.

الشواية

الطعام	الملح الذي يجب استخدامه	موضع الرف	درجة الحرارة (درجة مئوية)	وقت الخبز (دقيقة) (تقريباً)
كرات اللحم (لحم العجل) - 12 الكمية	الشواية السلكنية	4	250	20 ... 30
خبز محمص	الشواية السلكنية	4	250	1 ... 4

يُوصى بالتسخين المسبق لمدة 5 دقائق لكافة الأطعمة المشوية.

اقلب قطع الطعام بعد مرور نصف 1/2 وقت الشواء.

١-٩ معلومات التنظيف العامة

معلومات عامة

- بعد كل استخدام، نظّف أسطح المينا باستخدام منظف غسل الصحون، أو الماء الدافئ، وقطعة قماش ناعمة أو إسفنجة وجففها بقطعة قماش جافة.
- إذا كان منتجك يحتوي على وظيفة تنظيف سهل البخار، يمكنك إجراء التنظيف السهل بالبخار للأوساخ الخفيفة غير الدائمة. (راجع "التنظيف بالبخار السهل" [23]).

الأسطح الحفازة

- لا يمكن تغطية الجدران الجانبية في منطقة الطهي إلا بالمينا أو الجدران الحفازة. وهي تختلف حسب الموديل.
- تتميز الجدران الحفازة بسطح لامع خفيف ومسامي. ولا يجب تنظيف الجدران الحفازة للفرن.
- تنصّ الأسطح الحفازة الزيت بفضل هيكله المسامي وتبدأ في التآق عندما يكون السطح مشبعًا بالزيت، وفي هذه الحالة يوصى باستبدال الأجزاء.

الأسطح الزجاجية

- قم بتنظيف الجهاز باستخدام منظف غسل الأطباق والماء الدافئ وقطعة قماش من الألياف الدقيقة مخصصة للأسطح الزجاجية وجففها بقطعة قماش جافة من الألياف الدقيقة.
- إذا كان هناك منظف متبقي بعد التنظيف، فقم بمسحه بالماء البارد وجفف بقطعة قماش نظيفة وجافة من الألياف الدقيقة. • فقد تتسبب بقايا المنظفات في إتلاف سطح الزجاج في المرة القادمة.
- لا ينبغي تحت أي ظرف من الظروف تنظيف البقايا الجافة على السطح الزجاجي بسكاكين مسننة أو سلك أو أدوات خادشة مماثلة.
- يمكنك إزالة أصباغ الكالسيوم (أصباغ صفراء) على السطح الزجاجي باستخدام عامل إزالة قشور متاح تجاريًا، مع عامل إزالة قشور مثل الخل أو عصير الليمون.
- إذا كان السطح متسخًا بشدة، ضع مادة التنظيف على البقعة باستخدام إسفنجة وانظر وقتًا طويلاً حتى يعمل بشكل صحيح. ثم نظف السطح الزجاجي بقطعة قماش مبللة.
- إن تغيّرت اللون والبقع الموجودة على السطح الزجاجي أمر طبيعي وليست عيوبًا.

الأجزاء البلاستيكية والأسطح المطلية

- نظّف الأجزاء البلاستيكية والأسطح المطلية باستخدام منظف غسل الصحون، أو الماء الدافئ، وقطعة قماش ناعمة أو إسفنجة وجففها بقطعة قماش جافة.
- تأكد من أن مفاصل مكونات الجهاز ليست رطبة أو عليها مادة منظفة. بخلاف ذلك، قد يحدث تآكل في هذه المفاصل.

٢-٩ تنظيف الملحقات

- امتنع عن وضع ملحقات المنتج في غسالة الأطباق ما لم ينص على خلاف ذلك في دليل المستخدم.

- انتظر حتى يبرد المنتج قبل تنظيفه. فقد تسبب الأسطح الساخنة حروقًا!
- يجب تنظيف الجهاز وتجفيفه جيدًا بعد كل عملية. وبالتالي، يجب تنظيف بقايا الطعام بسهولة ويجب منع هذه البقايا من الاحتراق عند استخدام الجهاز مرة أخرى لاحقًا. وبالتالي، فإن العمر التشغيلي للجهاز يمتد ويقف المشاكل التي يتم مواجهتها بشكل متكرر.
- يمكن أن تؤدي بعض المنظفات أو مواد التنظيف إلى تلف السطح.
- عوامل التنظيف غير المناسبة هي: مواد التبييض، ومنتجات التنظيف التي تحتوي على الأمونيا، والحمض أو الكلوريد، ومنتجات التنظيف بالبخار، وعوامل إزالة الترسبات، ومزيلات البقع والصدأ، ومنتجات التنظيف الكاشطة (المنظفات الكريمية، ومسحوق التلميع، وكريمات التنظيف، ومواد التنظيف الحادشة والكاشطة، والأسلاك، والإسفنجة، وأقمشة التنظيف التي تحتوي على الأوساخ وبقايا المنظفات).
- ليست هناك حاجة إلى مواد تنظيف خاصة في التنظيف الذي يتم بعد كل استخدام. نظّف المنتج باستخدام منظف غسل الصحون، أو الماء الدافئ وقطعة قماش ناعمة أو إسفنجة وجففها بقطعة قماش جافة.
- تأكد من مسح أي سائل متبقي تمامًا بعد التنظيف وتنظيف أي طعام متناثر على الفور أثناء الطهي.
- امتنع عن غسل أي مكون من جهازك في غسالة الأطباق ما لم يتم ذكر خلاف ذلك في دليل المستخدم.

للمواقف:

- قد تتسبب الأوساخ الحمضية مثل الحليب ومعجون الطماطم والزيت في حدوث بقع دائمة على المواقف ومكونات مناطق الموقد، قم بتنظيف أي سائل فائضة فور تبريد الموقد عن طريق إيقاف تشغيله.

أسطح الإينوكس والفولاذ غير القابل للصدأ

- قد يتغير لون الأسطح غير القابل للصدأ أو الإينوكس مع مرور الوقت. هذا أمر طبيعي. بعد كل عملية، نظف بمنظف مناسب سطح الفولاذ المقاوم للصدأ أو الإينوكس.
- نظف بقطعة قماش ناعمة وصابون ومنظف سائل (غير خدش) مناسب للأسطح إينوكس، مع الحرص على المسح في اتجاه واحد.
- قم بإزالة بقع الحبر والزيت والنشا والحليب والبروتينات على الأسطح الزجاجية غير القابل للصدأ والإينوكس فورًا دون انتظار. فقد تصدأ البقع تحت الفترات الزمنية الطويلة.
- المنظفات التي يتم رشها / وضعها على السطح يجب تنظيفها على الفور. المنظفات الكاشطة المتروكة على السطح تجعل السطح يتحول إلى اللون الأبيض.

الأسطح المطلية بالمينا

- يجب أن يبرد الفرن قبل تنظيف منطقة الطهي. سيؤدي التنظيف على الأسطح الساخنة إلى حدوث كل من خطر الحريق والضرر بسطح المينا.


تنظيف الجدران الجانبية للفرن

لا يمكن تغطية الجدران الجانبية في منطقة الطهي إلا بالمينا أو الجدران الحفارة. وهي تختلف حسب الموديل. إذا كان هناك جدار حفاز، فارجع إلى قسم "الأسطح التحفيزية" للحصول على معلومات.

وإذا كان متحكك عبارة من موديل ذي رف سلكي، فقم بإزالة الرفوف السلكية قبل تنظيف الجدران الجانبية. ثم أكمل التنظيف كما هو موضح في قسم "معلومات التنظيف العامة" وفقاً لنوع سطح الجدار الجانبي.

لإزالة الرفوف السلكية الجانبية:

1. قم بإزالة الجزء الأمامي من الرف السلكي بسحبه على الجدار الجانبي في الاتجاه المعاكس.
2. اسحب الرف السلكي نحو لإزالته بالكامل.

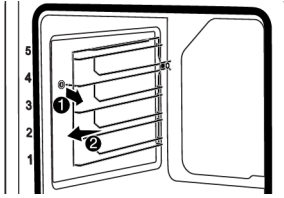


3. لإعادة إرفاق الرفوف، يجب تكرار الإجراءات المطبقة عند إزالتها من النهاية إلى البداية، على التوالي.

٦-٩ التنظيف بالبخار السهل

هذا يسمح بتنظيف الأوساخ (التي لا تبقى لفترة طويلة) التي يتم تليينها بالبخار داخل الفرن وبواسطة قطرات الماء المشكفة في الأسطح الداخلية للفرن بسهولة.

1. قم بإزالة جميع الملحقات الموجودة داخل الفرن.
2. أضف 500 مل من الماء إلى الصينية وضعها على الرف الثاني للفرن.

امتنع عن استخدام المياه المقطرة أو المفلترة. استخدم المياه الجاهزة فقط.

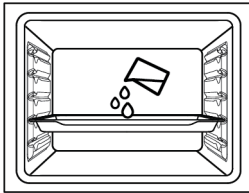

3. اضبط الفرن على وضع التشغيل السهل للتنظيف بالبخار وقم بتشغيله عند 100 درجة مئوية لمدة 15 دقيقة.

افتح الباب على الفور وامسح الأجزاء الداخلية للفرن بإسفنجة أو قطعة قماش مبللة. سينبثق البخار عند فتح الباب. قد يشكل ذلك خطر الإصابة بحروق. توخي الحذر عند فتح باب الفرن.


سطح طهي زجاجي

اتبع خطوات التنظيف الموضحة للأسطح الزجاجية في قسم "معلومات التنظيف العامة" لتنظيف سطح الطهي الزجاجي. يمكنك إكمال التنظيف وفقاً للمعلومات الواردة أدناه للحالات الخاصة.

- يجب تنظيف الأطعمة التي تحتوي على السكر مثل الكريمة الداكنة والنشا والشراب على الفور، دون انتظار أن يبرد السطح. بخلاف ذلك، قد يتلف سطح الطهي الزجاجي بشكل دائم.
- لا تستخدم مواد التنظيف لعمليات التنظيف التي تقوم بها عندما يكون الموقد ساخناً، وإلا فقد تظهر بقع دائمة.

المواقف الكهربائية

1. قم بإيقاف تشغيل الألواح الساخنة وانتظر حتى تبرد.
2. إذا لزم الأمر، قم بتنظيف ألواح التسخين بعامل تنظيف (يمكنك الحصول على المنظفات / المنعمات من المتاجر المتخصصة).
3. قم بتدفئتها فقط لبضع دقائق بعد التنظيف حتى يجف الجزء العلوي.
4. ضع طبقة رقيقة من زيت الماكينة على السطح العلوي لوح التسخين بانتظام لحمايته.

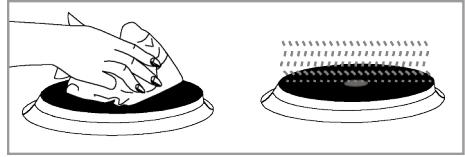


٤-٩ تنظيف لوحة التحكم


- عند تنظيف الألواح ذات التحكم بالمقبض، امسح اللوحة والمقابض بقطعة قماش ناعمة مبللة وجففها بقطعة قماش جافة. تجنب إزالة المقابض والحشيات الموجودة أسفلها لتنظيف اللوحة. قد تتلف لوحة التحكم والمقابض.
- أثناء تنظيف الألواح المصنوعة من الفولاذ المقاوم للصدأ باستخدام التحكم بالمقبض، تجنب استخدام مواد التنظيف المصنوعة من الفولاذ المقاوم للصدأ حول المقبض. يمكن مسح المؤشرات الموجودة حول المقبض.
- نظّف لوحات التحكم باللمس بقطعة قماش ناعمة رطبة وجففها بقطعة قماش جافة. وإذا كان المنتج يحتوي على ميزة قفل المفاتيح، فقم بتعيين قفل المفاتيح قبل إجراء تنظيف لوحة التحكم. وإلا، فقد يحدث كشف غير صحيح على المفاتيح.

٥-٩ تنظيف الفرن من الداخل (منطقة الطهي)


اتبع خطوات التنظيف الموضحة في قسم "معلومات التنظيف العامة" وفقاً لأنواع الأسطح في الفرن لديك.

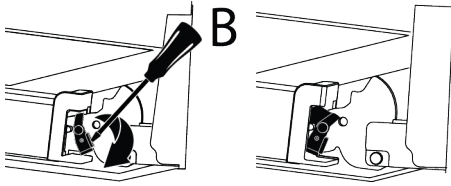

6. (C) نوع المفصلة متاح في أنواع باب الفتح / الإغلاق الناعم.

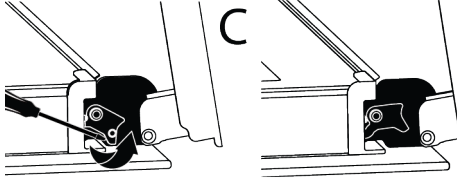

7. اجعل باب الفرن في وضع نصف مفتوح.

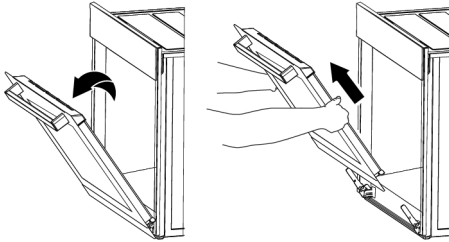


8. اسحب الباب الذي تم إزالته لأعلى لتحريره من المفصلات اليمنى واليسرى وإزالته.

إعادة إرفاق الباب، يجب تكرار الإجراءات المطبقة عند إزالتها من النهاية إلى البداية، على التوالي. عند تثبيت الباب، تأكد من إغلاق المشابك الموجودة على مقبس المفصلة.

8-9 إزالة الزجاج الداخلي لباب الفرن

يمكن إزالة الزجاج الداخلي للباب الأمامي للمنتج للتنظيف.

1. افتح باب الفرن.

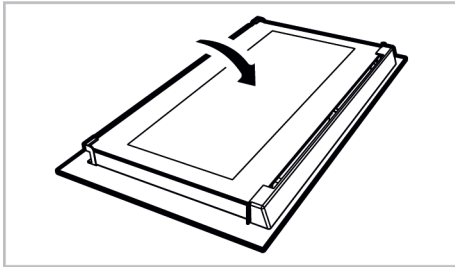


2. قم بإزالة المكون البلاستيكي المتصل بالجزء العلوي من الباب الأمامي عن طريق سحبه نحوك.

للأوساخ العنيدة، نظف المنتج باستخدام منظف غسل الصحون والماء الدافئ وقطعة قماش ناعمة أو إسفنجة وجففها بقطعة قماش جافة.

في وظيفة التنظيف بالبخار السهلة، من المتوقع أن يتبخر الماء الموجود في قاع الفرن ويتكثف داخل الفرن وباب الفرن من أجل تليين الأوساخ الخفيفة المتكونة في الفرن. قد يتساقط التكتاف المتشكل على باب الفرن عند فتح باب الفرن. امسح التكتاف بمجرد فتح باب الفرن.

بعد التكتيف داخل الفرن، قد تحدث بركة أو رطوبة في قناة المسبح أسفل الفرن. امسح قناة المسبح بقطعة قماش مبللة بعد الاستخدام وجففها.

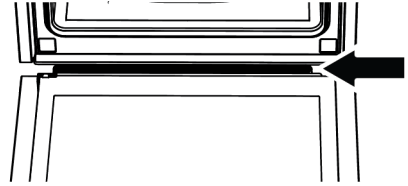


7-9 تنظيف باب الفرن

يمكن إزالة باب الفرن وزجاج الباب لتنظيفهما. تم توضيح كيفية إزالة الأبواب والنوافذ في القسمين "إزالة باب الفرن" و "إزالة الزجاج الداخلي للباب". بعد إزالة الزجاج الداخلي للباب، نظّفه باستخدام منظف غسل الصحون، أو الماء الدافئ، وقطعة قماش ناعمة أو إسفنجة وجففها بقطعة قماش جافة. بالنسبة للرواسب الجيرية التي قد تتكون على زجاج الفرن، امسح الزجاج بالخل واشطفه.


إزالة باب الفرن

1. افتح باب الفرن.
2. افتح المشابك الموجودة في مقبس مفصلات الباب الأمامي على اليمين وعلى اليسار بالضغط لأسفل كما هو موضح في الشكل.
3. تختلف أنواع المفصلات مثل (أ)، (ب)، (ج) وفقاً لطراز المنتج. توضح الأشكال التالية كيفية فتح كل نوع من المفصلات.
4. (أ) نوع المفصل متاح في أنواع الباب العادي.

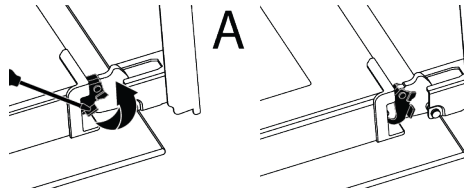


5. (ب) نوع المفصلة متاح في أنواع باب الإغلاق الناعم.

- يتم تشغيل هذا الفرن بواسطة مصباح وهاج به أقل من 40 وات، وارتفاع أقل من 60 مم، وقطر أقل من 30 مم، أو بمصباح هالوجين بمقاس G9 بقدرة أقل من 60 وات. المصابيح مناسبة للتشغيل في درجات حرارة أعلى من 300 درجة مئوية. تتوفر مصابيح الفرن من الخدمات المعتمدة أو الفنيين المرخصين. يحتوي هذا المنتج على مصباح فئة الطاقة G.

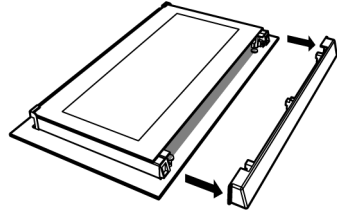

3. كما هو مبين في الشكل، ارفع الزجاج الداخلي (1) برفق باتجاه "A" ثم قم بإزالته عن طريق سحبه باتجاه "B".

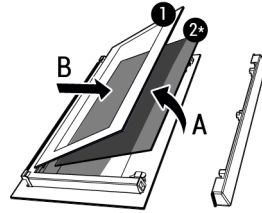

1 الزجاج الداخلي *2 الزجاج الداخلي (قد لا يكون متاحا لمنتجك)

4. إذا كان منتجك يحتوي على زجاج داخلي (2)، كرر نفس العملية لفصله (2).

5. الخطوة الأولى لإعادة تجميع الباب هي إعادة تجميع الزجاج الداخلي (2). ضع الحافة المشطوفة للزجاج لتلتقي بالحافة المشطوفة للفتحة البلاستيكية. (إذا كان المنتج الخاص بك يحتوي على زجاج داخلي). يجب توصيل الزجاج الداخلي (2) بالفتحة البلاستيكية الأقرب إلى الزجاج الداخلي (1).

6. أثناء إعادة تجميع الزجاج الداخلي (1)، انتبه لوضع الجانب المطبوع من الزجاج على الزجاج الداخلي. من الضروري وضع الزوايا السفلية للزجاج الداخلي (1) لتقابل الفتحات البلاستيكية السفلية.

7. ادفع المكون البلاستيكي باتجاه الإطار حتى تسمع صوت "نقرة".

9-9 تنظيف مصباح الفرن

في حالة استاخ الباب الزجاجي لمصباح الفرن في منطقة الطهي؛ نظفه باستخدام منظف غسل الصحون أو الماء الدافئ وقطعة قماش ناعمة أو إسفنجة وجفنه بقطعة قماش جافة. وفي حالة تعطل مصباح الفرن، يمكنك استبداله بالتابع الأقسام التالية.

استبدال مصباح الفرن

معلومات عامة

- لتجنب خطر حدوث صدمة كهربائية قبل استبدال مصباح الفرن، أفضل الموصل الكهربائي وانتظر حتى يبرد الفرن. فقد تسبب الأسطح الساخنة حروقًا!


- قد يختلف موضع المصباح عن ذلك الموضح في الشكل.
- يعد المصباح المستخدم في هذا المنتج غير مناسب للاستخدام في إضاءة غرف المنزل. ويتمثل الغرض من هذا المصباح في مساعدة المستخدم على رؤية المنتجات الغذائية.
- يجب أن تتحمل المصابيح المستخدمة في هذا المنتج الظروف المادية القاسية مثل درجات الحرارة فوق 50 درجة مئوية.

إذا كان الفرن لديك يحتوي على مصباح دائري،

1. أفضل المنتج عن الكهرباء.
2. أزل الغطاء الزجاجي بتدويره عكس اتجاه عقارب الساعة.




3. إذا كان مصباح الفرن الخاص بك من النوع (A) الموضح في الشكل أدناه، فقم بتدويره كما هو موضح في الشكل واستبدله بآخر جديد. أما إذا كان النوع (B) الموديل، فقم بسحبه للخارج كما هو موضح في الشكل واستبدله بآخر جديد.

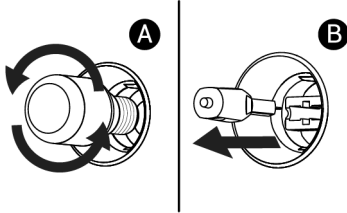


4. أعد تركيب الغطاء الزجاجي.

إذا كان فرنك يحتوي على مصباح مربع،

1. أفضل المنتج عن الكهرباء.
2. قم بإزالة الأرفف السلكية حسب الوصف.

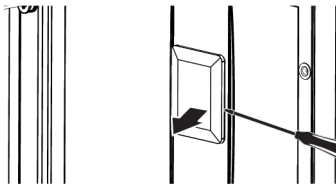

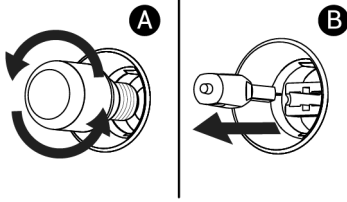

5. أعد تركيب الغطاء الزجاجي والأرفف السلكية.

3. ارفع الغطاء الزجاجي الواقى للمصباح باستخدام مفك البراغي. قم بإزالة البرغي أولاً ، إذا كان هناك برغي على المصباح المربع في منتصفك.

4. إذا كان مصباح الفرن الخاص بك من النوع (A) الموضح في الشكل أدناه، فقم بتدويره كما هو موضح في الشكل واستبدله بأخر جديد. أما إذا كان النوع (B) الموديل، فقم بسحبه للخارج كما هو موضح في الشكل واستبدله بأخر جديد.

١٠. استكشاف الأخطاء وإصلاحها

- ربما لم يتم توصيل الجهاز بمأخذ مؤرض. <<< تحقق من توصيل الجهاز بالمأخذ.
- (إذا كان هناك مؤقت في جهازك) لا تعمل المفاتيح الموجودة على لوحة التحكم. <<< إذا كان منتصفك يحتوي على قفل مفتاح، فقد يتم تمكين قفل المفتاح، قم بتعطيل قفل المفتاح.

ضوء الفرن غير مضاء.

- قد يكون مصباح الفرن معيَّباً. <<< استبدل مصباح الفرن.
- لا يوجد كهرباء. <<< تأكد من تشغيل التيار الكهربائي وتحقق من المصاهر في صندوق المصاهر. قم بتغيير المصاهر إذا لزم الأمر أو أعد تنشيطها.

الفرن لا يسخن.

- قد لا يتم ضبط الفرن على وظيفة طهي و / أو درجة حرارة معينة. <<< اضبط الفرن على وظيفة طهي و/أو درجة حرارة معينة.
- لا يوجد كهرباء. <<< تأكد من تشغيل التيار الكهربائي وتحقق من المصاهر في صندوق المصاهر. قم بتغيير المصاهر إذا لزم الأمر أو أعد تنشيطها.

إن استمرت المشكلة بعد اتباع تعليمات هذا القسم، اتصل بالبائع أو بمركز خدمة معتمد. لا تحاول إصلاح منتج معطل بنفسك.

ينبعث بخار أثناء تشغيل الفرن.

- من الطبيعي رؤية بخار أثناء التشغيل. <<< ولا يمثل ذلك خطأً.

تظهر قطرات الماء أثناء الطهي

- يتكثف البخار المتولد أثناء الطهي عندما يتلامس مع الأسطح الباردة خارج المنتج وقد يشكل قطرات الماء. <<< ولا يمثل ذلك خطأً.

تُسمع أصوات ضوضاء معدنية أثناء تسخين المنتج أو تبريده.

- قد تتمدد الأجزاء المعدنية وتصدر أصوات عندما تسخن. <<< ولا يمثل ذلك خطأً.

المنتج لا يعمل.

- قد يكون المصهر معيَّباً أو تالفاً. <<< افحص المصاهر في صندوق المصاهر. قم بتغييرها إذا لزم الأمر أو أعد تنشيطها.

معلومات إضافية لدليل المستخدم:		معلومات فنية حول تشغيل أوضاع الطاقة المنخفضة وفقاً للاتحاد الأوروبي 2023/826
الوضع	استهلاك الطاقة (واط)	الفترة (دقائق)*
إيقاف التشغيل	0,3	-
الاستعداد	-	-
وضع الاستعداد مع عرض معلومات أو حالة	-	-
وضع الاستعداد الشبكي	-	-

*: الفترة التي يظل بعدها الجهاز تلقائياً إلى وضع الاستعداد، أو وضع الإيقاف، أو وضع الاستعداد الشبكي، بالدقائق، مع تقريبها لأقرب دقيقة.

Welcome!

Dear Customer,

Thank you for choosing the Whirlpool product. We want your product, manufactured with high quality and technology, to offer you the best efficiency. Therefore, carefully read this manual and any other documentation provided before using the product.

Keep in mind all the information and warnings stated in the user's manual. This way, you will protect yourself and your product against the dangers that may occur.

Keep the user's manual. If you give the product to someone else, give the manual with it.

The warranty conditions, usage and troubleshooting methods for your product are provided in this manual.

Before using the appliance, read these safety instructions. Keep them nearby for future reference.

Beko Europe Management Srl

Via Varesina 204, 20156 Milano, Italy

Table of Contents

1 SAFETY INSTRUCTIONS.....	30	9.4	Cleaning the Control Panel	53
1.1 PERMITTED USE.....	31	9.5	Cleaning the inside of the oven (cooking area).....	53
1.2 INSTALLATION	31	9.6	Easy Steam Cleaning	53
1.3 ELECTRICAL WARNINGS	32	9.7	Cleaning the Oven Door	54
1.4 CLEANING AND MAINTENANCE..	33	9.8	Removing the Inner Glass of The Oven Door	55
2 Environmental Instructions	33	9.9	Cleaning the Oven Lamp.....	55
3 Your product	34	10 Troubleshooting.....	56	
3.1 Product Introduction	35			
3.1.1 Cooking unit	35			
3.1.2 Hob section.....	35			
3.2 Introduction of the oven control panel.....	35			
3.3 Oven operating functions.....	36			
3.4 Product Accessories.....	37			
3.5 Use of Product Accessories	37			
3.6 Technical Specifications.....	40			
4 Installation.....	41			
4.1 Right place for installation.....	41			
4.2 Electrical connection.....	42			
4.3 Placing the product	43			
5 First Use	44			
5.1 Initial Cleaning	44			
6 How to use the hob	45			
6.1 General information on hob us- age.....	45			
6.2 Operation of the hobs	45			
7 Using the Oven.....	46			
7.1 General Information on Using the Oven	46			
7.2 Operation of the Oven Control Unit	46			
8 General Information About Cooking	47			
8.1 General Information About Bak- ing in the Oven	47			
8.1.1 Pastries and oven food	47			
8.1.2 Meat, Fish and Poultry.....	49			
8.1.3 Grill.....	50			
8.1.4 Test foods	51			
9 Maintenance and Cleaning	51			
9.1 General Cleaning Information	51			
9.2 Cleaning Accessories	52			
9.3 Cleaning the hob	53			

1 SAFETY INSTRUCTIONS

IMPORTANT TO BE READ AND OBSERVED

Before using the appliance, read these safety instructions. Keep them nearby for future reference.

These instructions and the appliance itself provide important safety warnings, to be observed at all times. The manufacturer declines any liability for failure to observe these safety instructions, for inappropriate use of the appliance or incorrect setting of controls.

⚠ WARNING: The appliance and its accessible parts become hot during use. Care should be taken to avoid touching heating elements. Children less than 8 years of age must be kept away unless continuously supervised.

⚠ WARNING: If the hob surface is cracked, do not use the appliance – risk of electric shock.

⚠ WARNING: Danger of fire : Do not store items on the cooking surfaces.

⚠ CAUTION : The cooking process has to be supervised. A short cooking process has to be supervised continuously.

⚠ WARNING: Leaving the hob unattended when cooking with fat or oil can be dangerous – risk of fire. NEVER try to extinguish a fire with water, but switch off the appliance and then cover the flames e.g. with a lid or a fire blanket.

⚠ Do not use the hob as a work surface or support. Keep clothes or other flammable materials away from the appliance, until all the components have cooled down completely – risk of fire.

⚠ Very young children (0-3 years) should be kept away from the appliance. Young children (3-8 years) should be kept away from the appliance unless continuously supervised. Children from 8 years old and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance only if they are supervised or have been given instructions on safe use and understand the hazards involved. Children must not play with the appliance. Cleaning and user maintenance must not be carried out by children without supervision.

⚠ WARNING: The appliance and its accessible parts become hot during use. Care should be taken to avoid touching heating elements. Children less than 8 years of age must be kept away unless continuously supervised

⚠ Never leave the appliance unattended during food drying. If the appliance is suitable for probe usage, only use a temperature probe recommended for this oven - risk of fire.

⚠ Keep clothes or other flammable materials away from the appliance, until all the components have cooled down completely - risk of fire. Always be vigilant when cooking foods rich in fat, oil or when adding alcoholic beverages - risk of fire. Use oven gloves to remove pans and accessories. At the end of cooking, open the door with caution, allowing hot air or steam to escape gradually before accessing the cavity - risk of burns. Do not obstruct hot air vents at the front of the oven - risk of fire.

⚠ Exercise caution when the oven door is in the open or down position, to avoid hitting the door.

⚠ 1.1 PERMITTED USE

⚠ CAUTION: The appliance is not intended to be operated by means of an external switching device, such as a timer, or separate remote controlled system.

⚠ This appliance is intended to be used in household and similar applications such as: staff kitchen areas in shops, offices and other working environments; farm houses; by clients in hotels, motels, bed & breakfast and other residential environments.

⚠ No other use is permitted (e.g. heating rooms).

⚠ This appliance is not for professional use. Do not use the appliance outdoors.


⚠ Do not store explosive or flammable substances (e.g. gasoline or aerosol cans) inside or near the appliance - risk of fire.


⚠ 1.2 INSTALLATION


⚠ The appliance must be handled and installed by two or more persons - risk of injury. Use protective gloves to unpack and install - risk of cuts.


⚠ Installation, including water supply (if any), electrical connections and repairs must be carried out by a qualified technician. Do not repair or replace

any part of the appliance unless specifically stated in the user manual. Keep children away from the installation site. After unpacking the appliance, make sure that it has not been damaged during transport. In the event of problems, contact the dealer or your nearest Aftersales Service. Once installed, packaging waste (plastic, styrofoam parts etc.) must be stored out of reach of children - risk of suffocation. The appliance must be disconnected from the power supply before any installation operation - risk of electric shock. During installation, make sure the appliance does not damage the power cable - risk of fire or electric shock. Only activate the appliance when the installation has been completed.


 Do not remove the appliance from its polystyrene foam base until the time of installation.


 Do not install the appliance behind a decorative door - risk of fire.


 if the range is placed on a base, it must be leveled and fixed to the wall by the retention chain provided, to prevent the appliance slipping from the base.


 **WARNING:** In order to prevent the appliance from tipping, the retention chain provided must be installed. Refer to the instructions for installation.


1.3 ELECTRICAL WARNINGS

 **IMPORTANT:** Information about current and voltage consumption is provided on the rating plate.

 The rating plate is on the front edge of the oven (visible when the door is open).

 It must be possible to disconnect the appliance from the power supply by unplugging it if plug is accessible, or by a multi-pole switch installed upstream of the socket in accordance with the wiring rules and the appliance must be earthed in conformity with national electrical safety standards.

 The power cable must be long enough to connect the appliance, once fitted in its housing, to the main power supply. Do not pull the power supply cable.

 Do not use extension leads, multiple sockets or adapters. The electrical components must not be accessible to the user after installation. Do not use the

appliance when you are wet or barefoot. Do not operate this appliance if it has a damaged power cable or plug, if it is not working properly, or if it has been damaged or dropped.

⚠️ If the supply cord is damaged, it must be replaced with an identical one by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard - risk of electric shock.


⚠️ If the power cable needs to be replaced, contact an authorized service center.

⚠️ **WARNING:** Ensure that the appliance is switched off before replacing the lamp to avoid the possibility of electric shock.

⚠️ Installation using a power cable plug is not allowed unless the product is already equipped with the one provided by the Manufacturer.

2 Environmental Instructions

DISPOSAL OF PACKAGING MATERIALS

The packaging material is 100% recyclable and is marked with the recycle symbol . The various parts of the packaging must therefore be disposed of responsibly and in full compliance with local authority regulations governing waste disposal.

DISPOSAL OF HOUSEHOLD APPLIANCES

This appliance is manufactured with recyclable or reusable materials. Dispose of it in accordance with local waste disposal regu-

1.4 CLEANING AND MAINTENANCE

⚠️ **WARNING:** Ensure that the appliance is switched off and disconnected from the power supply before performing any maintenance operation; never use steam cleaning equipment - risk of electric shock.


⚠️ Do not use harsh abrasive cleaners or metal scrapers to clean the door glass since they can scratch the surface, which may result in shattering of the glass.

⚠️ Do not use abrasive or corrosive products, chlorine-based cleaners or pan scourers.

⚠️ Make sure the appliance has cooled down before cleaning or performing maintenance. - risk of burns.

⚠️ **WARNING:** Switch off the appliance before replacing the lamp - risk of electric shock.

lations. For further information on the treatment, recovery and recycling of household electrical appliances, contact your local authority, the collection service for household waste or the store where you purchased the appliance. This appliance is marked in compliance with European Directive 2012/19/EU, Waste Electrical and Electronic Equipment (WEEE) and with the Waste Electrical and Electronic Equipment regulations 2013 (as amended). By ensuring this product is disposed of correctly,

you will help prevent negative consequences for the environment and human health. The  symbol on the product or on the accompanying documentation indicates that it should not be treated as domestic waste but must be taken to an appropriate collection center for the recycling of electrical and electronic equipment.

ENERGY SAVING TIPS

Only preheat the oven if specified in the cooking table or your recipe.

Use dark lacquered or enamelled baking trays as they absorb heat better.

Food requiring prolonged cooking will continue to cook even once the oven is switched off.

Make sure the oven door is closed completely when the appliance is turned on and keep it closed as much as possible while baking.

Cut the food into small, equally-sized pieces to reduce cooking time and save energy.

When the cooking time is long, over 30 minutes, reduce the oven temperature to the lowest setting during the last phase (3-10 minutes), based on the overall cooking time. The residual heat inside the oven will continue cooking the food.

DECLARATIONS OF CONFORMITY

This appliance meets: Ecodesign requirements of European Regulation 66/2014; Energy Labelling Regulation 65/2014; Ecodesign for Energy-Related Products and Energy Information (Amendment) (EU Exit) Regulations 2019, in compliance with the European standard EN 60350-1.

This appliance meets Ecodesign requirements of European Regulation 66/2014 and The Ecodesign for Energy-Related Products and Energy Information (Amendment) (EU Exit) Regulations 2019 in compliance with the European standard EN 60350-2.


This product can contain halogen light (Energy Efficiency Class G) or LED light source (Energy Efficiency Class F).



3 Your product


In this section, you can find the overview and basic uses of the product's control panel. There may be differences in images and some features depending on the type of product.

3.1 Product Introduction

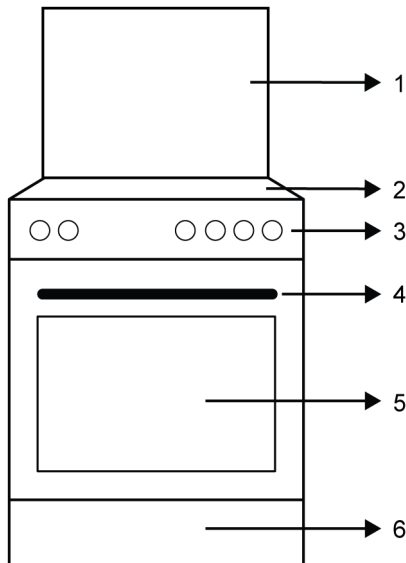

- 1 Top lid
- 2 Hob section
- 3 Control panel
- 4 Handle
- 5 Door
- 6 Bottom part


3.1.1 Cooking unit

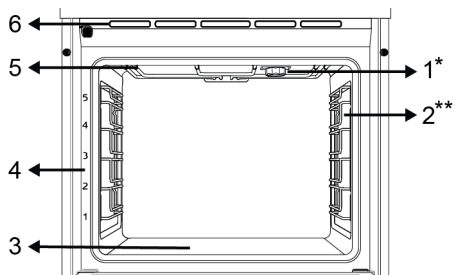

- 1 Lamp


- 2 Wire shelves
- 3 Lower heater (under the steel plate)
- 4 Shelf positions
- 5 Upper heater
- 6 Ventilation holes
- * Varies depending on the model. Your product may not be equipped with a lamp, or the type and location of the lamp may differ from the illustration.
- ** Varies depending on the model. Your product may not be equipped with a wire rack. In the image, a product with wire rack is shown as an example.

3.1.2 Hob section

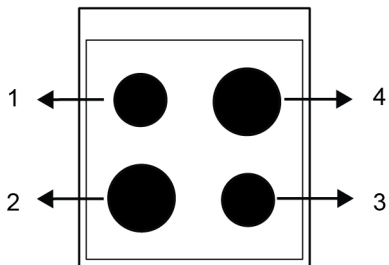

- 1 Rear left - Hotplate
- 2 Front left - Hotplate
- 3 Front right - Hotplate
- 4 Rear right - Hotplate

3.2 Introduction of the oven control panel

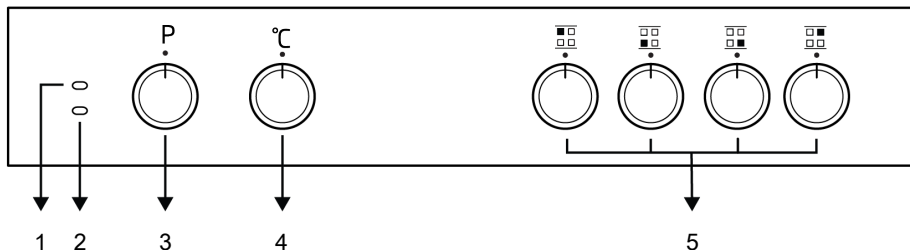

- 1 Active hob warning lamp
- 3 Function selection knob
- 5 Hob control knobs

- 2 Thermostat lamp
- 4 Temperature knob

If there are knob(s) controlling your product, in some models this/these knob(s) may be so that they come out when pushed (buried knobs). For settings to be made with these knobs, first push the relevant knob in and pull out the knob. After making your adjustment, push it in again and replace the knob.

Function selection knob

You can select the oven operating functions with the function selection knob. Turn left / right from closed (top) position to select.

Temperature knob

You can select the temperature you want to cook with the temperature knob. Turn clockwise from the closed (top) position to select.

Oven inner temperature indicator

You can understand the oven interior temperature from the temperature lamp. The thermostat lamp is located on the control





panel. The thermostat lamp turns on when the product starts to operate, and the thermostat lamp turns off when it reaches the set temperature. When the temperature inside the oven drops below the set temperature, the thermostat lamp turns on again.

Hob control knobs

You can operate your hob with the hob control knobs. Each knob operates the respective hotplate. You may infer which hotplate it controls from the symbols on the control panel.

3.3 Oven operating functions

On the function table, the operating functions you can use in your oven and the highest and lowest temperatures that can be set for these functions are shown. The order of the operating modes shown here may differ from the arrangement on your product.

Function symbol	Function description	Temperature range (°C)	Description and use
	Top and bottom heating	*	Food is heated from above and below at the same time. Suitable for cakes, pastries or cakes and stews in baking moulds. Cooking is done with a single tray.
	Bottom heating	*	Only lower heating is on. It is suitable for foods that need browning on the bottom. This function should also be used for easy steam cleaning.
	Low grill	*	The small grill on the oven ceiling works. It is suitable for grilling smaller amounts.
	Full grill	*	The large grill on the oven ceiling works. It is suitable for grilling in large amounts.

* Your product operates in the temperature range specified on the temperature knob.

3.4 Product Accessories


There are various accessories in your product. In this section, the description of the accessories and the descriptions of the correct usage are available. Depending on the product model, the supplied accessory varies. All accessories described in the user's manual may not be available in your product.



The trays inside your appliance may be deformed with the effect of the heat. This has no effect on the functionality. Deformation disappears when the tray is cooled.

Standard tray


It is used for pastries, frozen foods and frying large pieces.

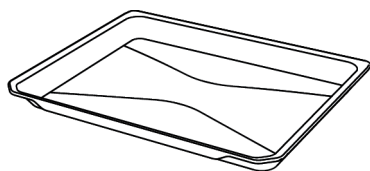


Wire grill

It is used for frying or placing the food to be baked, fried and stewed on the desired shelf.

On models with wire shelves :

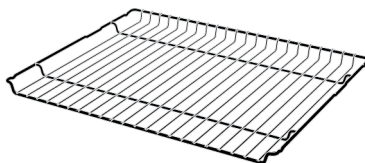

On models without wire shelves :

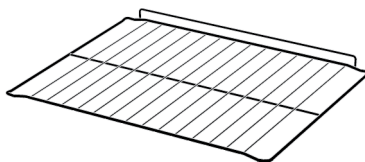


3.5 Use of Product Accessories


Cooking shelves

There are 5 levels of shelf position in the cooking area. You can also see the order of the shelves in the numbers on the front frame of the oven.

On models with wire shelves :

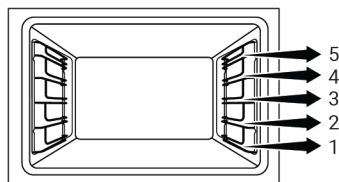


On models without wire shelves :

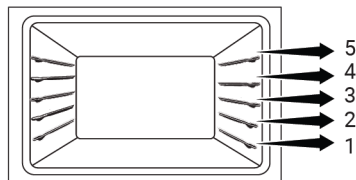

Placing the wire grill on the cooking shelves


On models with wire shelves :

It is crucial to place the wire grill on the wire side shelves properly. While placing the wire grill on the desired shelf, the open section must be on the front. For better cooking, the wire grill must be secured on the wire shelf's stopping point. It must not pass over the stopping point to contact with the rear wall of the oven.

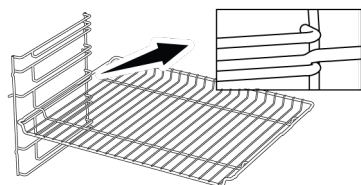

On models without wire shelves :


It is crucial to place the wire grill on the side shelves properly. The wire grill has one direction when placing it on the shelf. While placing the wire grill on the desired shelf, the open section must be on the front.

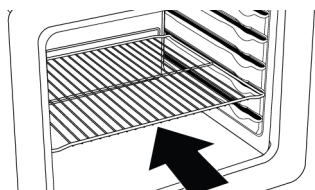

Placing the tray on the cooking shelves


On models with wire shelves :

It is also crucial to place the trays on the wire side shelves properly. While placing the tray on the desired shelf, its side designed for holding must be on the front. For better cooking, the tray must be secured on the stopping socket on the wire shelf. It must not pass over the stopping socket to contact with the rear wall of the oven.

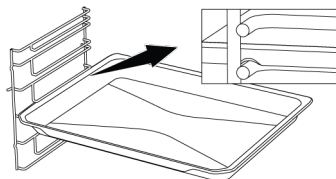

On models without wire shelves :


It is also crucial to place the trays on the side shelves properly. The tray has one direction when placing it on the shelf. While placing the tray on the desired shelf, its side designed for holding must be on the front.

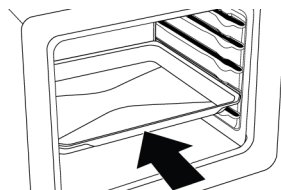


Stopping function of the wire grill

There is a stopping function to prevent the wire grill from tipping out of the wire shelf. With this function, you can easily and safely take out your food. While removing the wire grill, you can pull it forward until it reaches the stopping point. You must pass over this point to remove it completely.

On models with wire shelves :

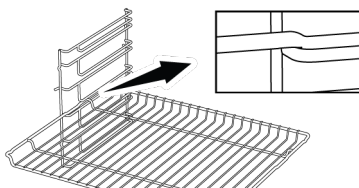


On models without wire shelves :

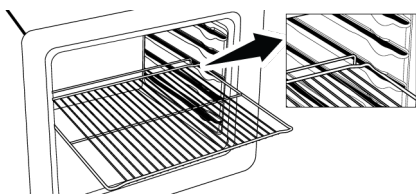


Tray stopping function - On models with wire shelves

There is also a stopping function to prevent the tray from tipping out of the wire shelf. While removing the tray, release it from the rear stopping socket and pull it towards yourself until it reaches the front side. You must pass over this stopping socket to remove it completely.

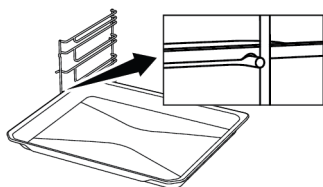

Proper placement of the wire grill and tray on the telescopic rails-On models with wire shelves and telescopic models

Thanks to the telescopic rails, trays or wire shelves can be easily installed and removed. Care should be taken to place the trays and wire shelves on the telescopic rails as shown in the figure below.

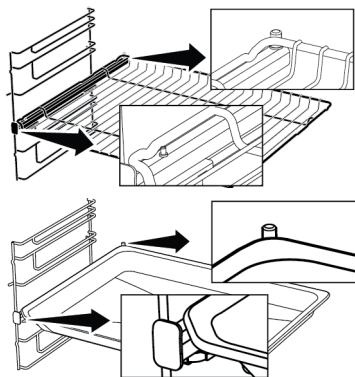

3.6 Technical Specifications

General specifications	
Product external dimensions (height/width/depth) (mm)	850 /600 /600
Voltage/Frequency	1N ~ 220-240 V/3N ~ 380-415 V 50/60 Hz
Cable type and section used/suitable for use in the product	min. H05VV-FG 3 x 4 mm ² (1N) / H05VV-FG 5 x 2,5 mm ² (3N)
Total power consumption (kW)	8,3
Oven type	Conventional oven
Front left	Hotplate
Dimension	180 mm
Power	2000 W
Rear left	Hotplate
Dimension	145 mm
Power	1000 W
Front right	Hotplate
Dimension	145 mm
Power	1000 W
Rear right	Hotplate
Dimension	180 mm
Power	2000 W

Basics: Information on the energy label of electrical ovens is given in accordance with the EN 60350-1 / IEC 60350-1 standard. Those values are determined under standard load with bottom-top heater or fan assisted heating (if any) functions.

Energy efficiency class is determined in accordance with the following prioritization depending on whether the relevant functions exist on the product or not: 1-Eco fan heating , 2-Fan Heating , 3-Fan assisted low grill , 4-Top and bottom heating.



Technical specifications may be changed without prior notice to improve the quality of the product.



Figures in this manual are schematic and may not exactly match your product.



Values stated on the product labels or in the documentation accompanying it are obtained in laboratory conditions in accordance with relevant standards. Depending on operational and environmental conditions of the product, these values may vary.

4 Installation


General information

- Refer to the nearest Authorised Service Agent for installation of the product. Make sure that the electric and gas installations are in place before calling the Authorised Service Agent to have the product ready for operation. If not, call a qualified electrician and fitter to have the required arrangements made. The manufacturer shall not be held responsible for damages arising from procedures carried out by unauthorized persons which may also void the warranty.
- It is customer's responsibility to prepare the location the product shall be placed on and also have power and/or gas utility prepared.
- The rules specified in local standards about electrical and/or gas installations (legal rules on installation) shall be followed during product installation.
- Check for any damage on the appliance before the installation.


4.1 Right place for installation

- Place the product on a hard surface because of the air ducts under the product. It must not be placed onto a base or a pedestal. The feet of the product should not dip on soft surfaces, e.g. carpet, etc.
- The kitchen floor must be able to carry the weight of the appliance plus the additional weight of cookware and bakeware and food.
- This product is a class 1 device according to EN 30-1-1 standard. It can be placed adjacent to the kitchen walls, kitchen furniture or any other product in any dimension from behind and one edge. The kitchen furniture or equipment on the other side may only be of the same size or smaller.
- It can be used with cabinets on either side but in order to have a minimum distance of 400mm above hotplate level al-

low a side clearance of 65mm between the appliance and any wall, partition or tall cupboard.

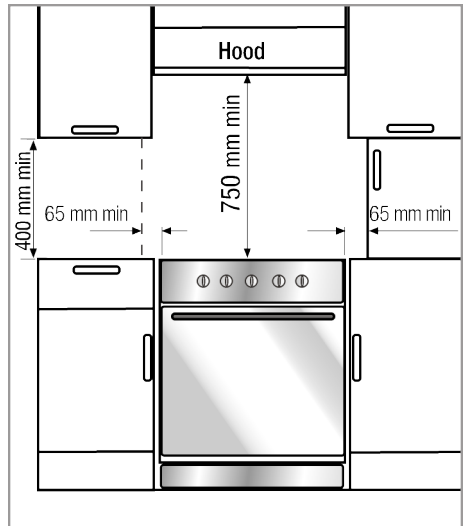

- It can also be used in a free standing position. Allow a minimum distance of 750 mm above the hob surface.
- If a cooker hood is to be installed above the cooker, refer to the instructions of the manufacturer of the cooker hood regarding installation height (min. 650 mm).
- Any kitchen furniture next to the appliance must be heat-resistant (100 °C min.).

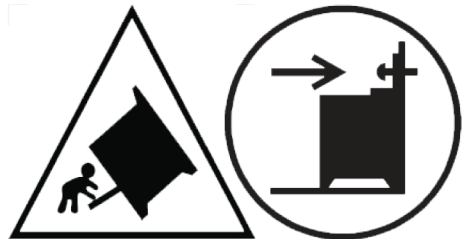


In order to prevent tipping of the appliance, this stabilizing means must be installed. Refer to the instructions for installation.

Safety chain

The appliance must be secured against overbalancing by using the supplied one safety chain on your oven.

If your product has 2 safety chains;

Fasten hook (1) by using a proper peg to the kitchen wall (6) and connect safety chain (3) to the hook via the locking mechanism (2).

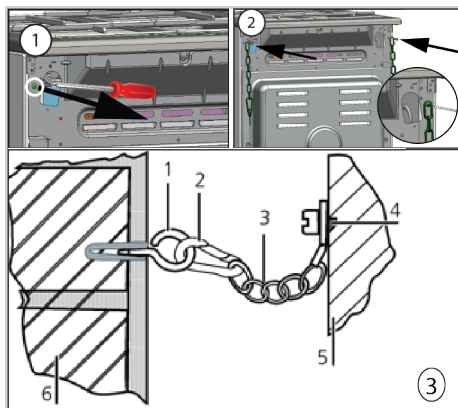


- 1 Hook
- 2 Locking mechanism
- 3 Safety chain
- 4 Firmly fix chain to product rear
- 5 Rear of product
- 6 Kitchen wall

If your product has 1 safety chains;



The appliance must be secured against overbalancing by using the supplied one safety chain on your oven.

Follow below steps in the picture to secure the safety chain to your product.

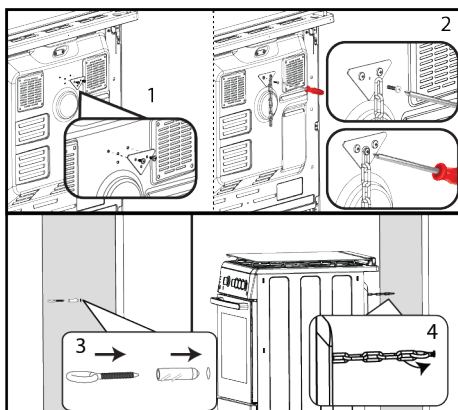

i Stability chain to be as short as practicable to avoid oven tilting forward and diagonal to avoid oven side tilting. Stability chain is designed for cookers without a bracket engagement slot.

4.2 Electrical connection

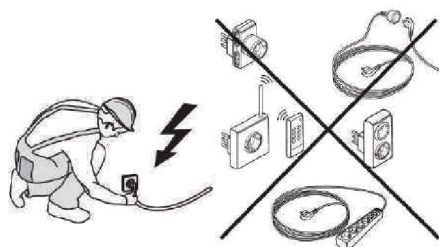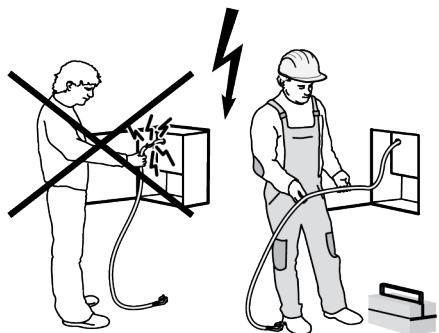

- Disconnect the product from the electric connection before starting any work on the electrical installation. There is an electric shock hazard.
- Connect the product to a grounded outlet/line protected by a miniature circuit breaker of suitable capacity as stated in the "Technical specifications" table. Have the grounding installation made by a qualified electrician while using the product with or without a transformer. Our company shall not be liable for any damages that will arise due to using the product without a grounding installation in accordance with the local regulations.
- The product can only be connected to the mains electricity connection by an authorized and qualified person, and the


warranty of the product starts only after correct installation. The manufacturer cannot be held responsible for any damages that may arise due to operations by unauthorized persons.

- The electric cable must not be crushed, folded, jammed or touch hot parts of the product. If the electric cable is damaged, it must be replaced by a qualified electrician. Otherwise there is an electric shock, short circuit or fire hazard!
- The mains supply data must correspond to the data specified on the type label of the product. The rating plate is either seen when the door or the lower cover of the appliance is opened or it is located at the rear wall of the appliance depending on the appliance type.
- and must use the appropriate socket outlet/line and plug for oven. In case of the product's power limits are out of current carrying capability of plug and socket outlet/line, the product must be connected through fixed electrical installation directly without using plug and socket outlet/line.
- **If the product will be connected directly to the supply power:** If it is not possible to disconnect all poles in the supply power, a disconnection unit with at least 3 mm contact clearance (fuses, line safety switches, contactors) must be connected and all the poles of this disconnection unit must be adjacent to (not above) the product in accordance with IEE directives. Failure to obey this instruction may cause operational problems and invalidate the product warranty.
- Additional protection by a residual current circuit breaker is recommended.



If the product is produced with cable and without plug:

Connect the cord of product to supply power as identified below:

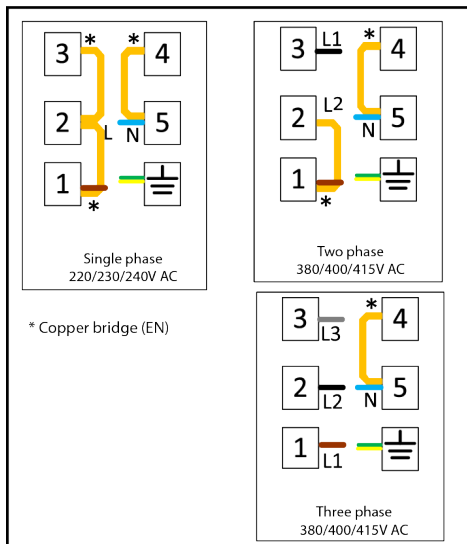Make the terminal block connection of your product according to the connection/phase information on the product type label.



If your supply cord type is 3-conductor type, for 1-phase connection:

- Brown/Black = L (Phase)
 - Blue = N (Neutral)
 - Green/Yellow wire = (E)  (Earthing)
- If your supply cord type is 5-conductor type, for 3-phase connection:
- Brown = L1 (Phase)
 - Black = L2 (Phase)
 - Grey = L3 (Phase)
 - Blue = N (Neutral)
 - Green/Yellow wire = (E)  (Earthing)

4.3 Placing the product

1. Push the product towards the kitchen wall.
2. Secure the safety chain you have connected to the product to the wall.
3. Adjust the feet of oven

Adjusting the feet of oven

Vibrations during use may cause cooking vessels to move. This dangerous situation can be avoided if the product is level and balanced.

For your own safety please ensure the product is level by adjusting the four feet at the bottom by turning left or right and align level with the work top.

Final check

1. Reconnect the product to the mains.

5 First Use

Before you start using your product, it is recommended to do the following stated in the following sections respectively.

5.1 Initial Cleaning

1. Remove all packaging materials.
2. Remove all accessories from the oven provided with the product.
3. Operate the product for 30 minutes and then, turn it off. This way, residues and layers that may have remained in the oven during production are burned and cleaned.
4. When operating the product, select the highest temperature and the operating function that all the heaters in your

2. Check electrical functions.

product operate. See "Oven operating functions". You can learn how to operate the oven in the following section.

5. Wait for the oven to cool.
6. Wipe the surfaces of the product with a wet cloth or sponge and dry with a cloth.

Before using the accessories:


Clean the accessories you remove from the oven with detergent water and a soft cleaning sponge.

NOTICE: During the first use, smoke and odour may come up for several hours. This is normal and you just need good ventilation to remove it. Avoid directly inhaling the smoke and odours that form.

6 How to use the hob

6.1 General information on hob usage

- Refrain from using unbalanced and easily tilting pots/pans on the hob.



- Refrain from heating the pots/pans and pots empty. The pots and the appliance may be damaged.
- Always turn off the hob's burners after each use.
- You shall damage the appliance if you operate the hobs without any pot or pots/pans. Always turn off the hobs after each operation.


- After each use the cooking surface will be hot, so refrain from putting the plastic pots/pans on the cooking surface. Clean such material on the surface immediately.
- Sudden temperature changes on the glass cooking surface may cause damage, be careful not to spill cold liquids during cooking.
- Put a sufficient amount of food in pots and pans. Thus, you can prevent food from pouring forth out of the pots/pans and will not need to clean unnecessarily.
- Refrain from placing the covers of pots and pans on burners/zones.
- Place the pots by centering them on the burners/zones. If you wish to place a pot on a different burner/zone, do not slide it towards the desired burner; rather, lift it first and then put it on the other burner.

Recommended cooking pots/pans sizes

Cooking zone diameter - mm	Pot diameter - cm
80	8 - 10
145	14 - 16
180	18 - 20
220	22 - 24

6.2 Operation of the hobs

Using the hotplate(s)

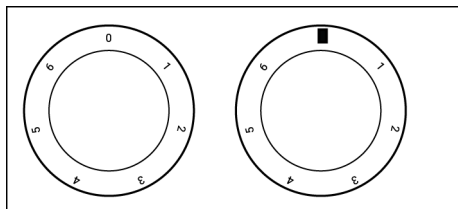

You may operate the hotplate(s) with hob control knob(s). Each knob operates the respective hotplate. You may infer which hotplate it controls from the symbols on the control panel.

When turned off (top position), the hotplate does not operate. Set your desired cooking level by aligning the knob to the respective levels.

The hob(s) may have different operating levels as per the model of your appliance. You may select the relevant level for your cooking type by referring to the table below.

6 levels:

- 1 : Heating
- 2 - 3 : Boiling, Resting
- 4 - 6 : Baking, Frying, Boiling

Active hob warning lamp

As soon as the hotplate(s) are turned on, the active hob warning lamp on the control panel turns on. This lamp indicates that the hotplate or at least one of its hotplates, if any, is working. When all the knobs on the hotplate(s) are turned off, the lamp goes off.

Turning the hotplate on

To operate the hotplates, the hob control knobs are used. To obtain your desired cooking level, switch the hob control knob to the desired level.

Turning the hotplate off

Bring the hob control knob to OFF position (top).



If there are hotplates with quick heating feature, these are marked with a red dot.

Overheating protection

Hobs with a power above 1000 W are equipped with overheating protection. Overheating protection reduces the power of the hotplate in the following conditions:

- No pots or vessels on the hotplate.
- Empty pot or vessel on the hotplate.
- The fact that the base of the pot or vessel is not flat.

7 Using the Oven

7.1 General Information on Using the Oven

Cooling fan (It varies depending on the product model. It may not be available on your product.)

Your product has a cooling fan. The cooling fan is activated automatically when necessary and cools both the front of the product and the furniture. It is automatically deactivated when the cooling process is finished. Hot air comes out over the oven door. Refrain from covering these ventilation openings. Otherwise, the oven may overheat. The cooling fan continues to operate during oven operation or after the oven is turned off (approximately 20-30 minutes). If you cook by programming the oven timer, at the end of the baking time, the cooling fan turns off with all functions. The cooling fan running time cannot be determined by the user. It turns on and off automatically. This is not an error.

Oven lighting

The oven lighting is turned on when the oven starts baking. In some models, the lighting is on during baking, while in some models it turns off after a certain time.

7.2 Operation of the Oven Control Unit

Turning on the oven


When you select a operating function you want to cook with the function selection knob and set a certain temperature with the temperature knob, the oven starts operating.

Turning off the oven

You can turn the oven off by turning the function selection knob and temperature knob to the off (up) position.

Selecting the temperature and oven operating function.

You can cook by making a manual control (at your own control) by selecting the temperature and operating function specific to your food.

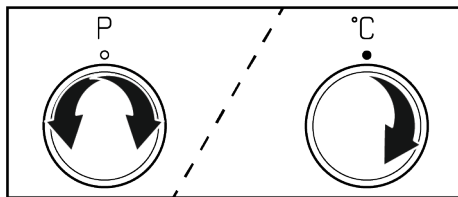

1. Select the operating function you want to cook with the function selection knob.

2. Set the temperature you want to cook with the temperature knob.
 - ⇒ Your oven will start operating immediately at the selected function and temperature, and the thermostat lamp will turn on. When the temperature inside the oven reaches the desired temperat-

ure, the thermostat lamp will turn off. The oven will not turn off by itself after the baking process. You have to control baking and turn it off yourself. When your baking is completed, turn off the oven by turning the function selection knob and the temperature knob to the off (up) position.

8 General Information About Cooking

You can find tips on preparing and cooking your food in this section.

Plus, this section describes some of the foods tested as producers and the most appropriate settings for these foods. Appropriate oven settings and accessories for these foods are also indicated.

8.1 General Information About Baking in the Oven

- While opening the oven door during or after baking, hot-burning steam may emerge. The steam may burn your hand, face and/or eyes. When opening the oven door, stay away.
- Intense steam generated during baking may form condensed water drops on the interior and exterior of the oven and on the upper parts of the furniture due to the temperature difference. This is a normal and physical occurrence.
- Condensation or water vapour may appear as sweating or dripping on the oven's inner glass, depending on the food. This common occurrence could happen when cooking. It is advised to use a moist cloth to wipe the inner glass clean when the product has cooled down after cooking.
- The cooking temperature and time values given for foods may vary depending on the recipe and amount. For this reason, these values are given as ranges.
- Always remove unused accessories from the oven before you start cooking. Accessories that will remain in the oven may prevent your food from being cooked at the correct values.

- For foods that you will cook according to your own recipe, you can reference similar foods given in the cooking tables.
- Using the supplied accessories ensures you get the best cooking performance. Always observe the information provided by the manufacturer for the external cookware you will use.
- Cut the greaseproof paper you will use in your cooking in suitable sizes to the container you will cook. Greaseproof papers that are overflowing from the container can create a risk of burns and affect the quality of your baking. Use the greaseproof paper you will use in the temperature range specified.
- For good baking performance, place your food on the recommended correct shelf. Do not change the shelf position during baking.

8.1.1 Pastries and oven food

General Information

- We recommend using the accessories of the product for a good cooking performance. If you will use an external cookware, prefer dark, non-sticking and heat resistant ware.
- If preheating is recommended in the cooking table, be sure to put your food in the oven after preheating.
- If you will cook by using cookware on the wire grill, place it in the middle of the wire grill, not near the back wall.
- All materials used in making pastry should be fresh and at room temperature.

- The cooking status of the foods may vary depending on the amount of food and the size of the cookware.
- Metal, ceramic and glass moulds extend the cooking time and the bottom surfaces of pastry foods do not brown evenly.
- If you are using baking paper, a small browning can be observed on the bottom surface of the food. In this situation, you may have to extend your cooking period by approximately 10 minutes.
- The values specified in the cooking tables are determined as a result of the tests carried out in our laboratories. Values suitable for you may differ from these values.
- Place your food on the appropriate shelf recommended in the cooking table. Refer to the bottom shelf of the oven as shelf 1.
- Cook the recommended dishes in the cooking table with a single tray.

Tips for baking cakes

- If the cake is too dry, increase the temperature by 10°C and shorten the baking time.
- If the cake is moist, use a small amount of liquid or reduce the temperature by 10°C.

- If the top of the cake is burnt, put it on the lower shelf, lower the temperature and increase the baking time.
- If the inside of the cake is cooked well, but outside is sticky, use less liquid, decrease the temperature and increase the cooking time.

Hints for pastry

- If the pastry is too dry, increase the temperature by 10 °C and shorten the cooking time. Wet the dough sheets with a sauce consisting of milk, oil, egg and yoghurt mixture.
- If the pastry is getting cooked slowly, make sure that the thickness of the pastry you have prepared does not overflow the tray.
- If the pastry is browned on the surface but the bottom is not cooked, make sure that the amount of sauce you will use for the pastry is not too much at the bottom of the pastry. For an even browning, try to spread the sauce evenly between the dough sheets and the pastry.
- Bake your pastry in the position and temperature appropriate to the cooking table. If the bottom is still not browned enough, place it on a bottom shelf for the next cooking.

Cooking table for pastries and oven foods

Food	Accessory to be used	Operating function	Shelf position	Temperature (°C)	Baking time (min) (approx.)
Cake on the tray	Standard tray *	Top and bottom heating	3	180	30 ... 45
Cake in the mould	Cake mould on wire grill **	Top and bottom heating	2	180	30 ... 50
Small cakes	Standard tray *	Top and bottom heating	3	160	25 ... 35
Sponge cake	Round springform pan, 26 cm in diameter on wire grill **	Top and bottom heating	2	160	30 ... 45
Cookie	Pastry tray *	Top and bottom heating	3	170	25 ... 40
Rich pastry	Standard tray *	Top and bottom heating	2	200	30 ... 45
Dough pastry	Standard tray *	Top and bottom heating	2	200	20 ... 35
Whole bread	Standard tray *	Top and bottom heating	3	200	30 ... 45

Food	Accessory to be used	Operating function	Shelf position	Temperature (°C)	Baking time (min) (approx.)
Lasagne	Glass / metal rectangular container on wire grill **	Top and bottom heating	2 or 3	200	30 ... 45
Apple pie	Round black metal mould, 20 cm in diameter on wire grill **	Top and bottom heating	2	180	60 ... 75
Pizza	Standard tray *	Top and bottom heating	2	220	10 ... 25

Preheating is recommended for all food.

*These accessories may not be included with your product.

**These accessories are not included with your product. They are commercially available accessories.

8.1.2 Meat, Fish and Poultry

The key points on grilling

- Seasoning it with lemon juice and pepper before cooking whole chicken, turkey and large pieces of meat will increase cooking performance.
- It takes 15 to 30 minutes more to cook boned meat than fillet by frying.
- You should calculate about 4 to 5 minutes of cooking time per centimetre of the meat thickness.

- After the cooking time is expired, keep the meat in the oven for approximately 10 minutes. The juice of the meat is better distributed to the fried meat and does not come out when the meat is cut.
- Fish should be placed on the medium or low level shelf in a heat resistant plate.
- Cook the recommended dishes in the cooking table with a single tray.

Cooking table for meat, fish and poultry

Food	Accessory to be used	Operating function	Shelf position	Temperature (°C)	Baking time (min) (approx.)
Steak (whole) / Roast (1 kg)	Standard tray *	Top and bottom heating	3	15 mins. 250/ max, after 180 ... 190	60 ... 80
Lamb's shank (1,5-2 kg)	Standard tray *	Top and bottom heating	3	15 mins. 250/ max, after 170	110 ... 120
Fried chicken (1,8-2 kg)	Wire grill * Place one tray on a lower shelf	Top and bottom heating	2	15 mins. 250/ max, after 190	70 ... 90
Turkey (5.5 kg)	Standard tray *	Top and bottom heating	1	25 mins. 250/ max, after 180 ... 190	150 ... 210
Fish	Wire grill * Place one tray on a lower shelf	Top and bottom heating	3	200	20 ... 40

Preheating is recommended for all food.

*These accessories may not be included with your product.

**These accessories are not included with your product. They are commercially available accessories.

8.1.3 Grill

Red meat, fish and poultry meat quickly turns brown when grilled, holds a beautiful crust and does not dry out. Fillet meats, skewer meats, sausages as well as juicy vegetables (tomatoes, onions, etc.) are particularly suitable for grilling.

General information

- When the preheating time is 5 minutes in the grill mode, skip the preheating, do not wait for the entire preheating time to pass.
- **Close the oven door during grilling. Never grill with the oven door open.**

The key points of the grill

- Prepare foods of similar thickness and weight as much as possible for the grill.

- Place the pieces to be grilled on the wire grill or wire grill tray by distributing them without exceeding the dimensions of the heater.
- Depending on the thickness of the pieces to be grilled, the cooking times given in the table may vary.
- Slide the wire grill or the wire grill tray to the desired level in the oven. If you are cooking on the wire grill, slide the oven tray to the lower shelf to collect the oils. The oven tray you will slide should be sized to cover the entire grill area. This tray may not be supplied with the product. Put some water into the oven tray for easy cleaning.

Grill table

Food	Accessory to be used	Shelf position	Temperature (°C)	Baking time (min) (approx.)
Fish	Wire grill	4 - 5	250	20 ... 25
Chicken pieces	Wire grill	4 - 5	250	25 ... 35
Meatball (veal) - 12 amount	Wire grill	4	250	20 ... 30
Lamb chop	Wire grill	4 - 5	250	20 ... 25
Steak - (meat cubes)	Wire grill	4 - 5	250	25 ... 30
Veal chop	Wire grill	4 - 5	250	25 ... 30
Vegetable gratin	Wire grill	4 - 5	220	20 ... 30
Toast bread	Wire grill	4	250	1 ... 4

It is recommended to preheat for 5 minutes for all grilled food.

Turn pieces of food after 1/2 of the total grilling time.

8.1.4 Test foods

- Foods in this cooking table are prepared according to the EN 60350-1 standard to facilitate testing of the product for control institutes.

- Cook the recommended dishes in the cooking table with a single tray.

Cooking table for test meals

Food	Accessory to be used	Operating function	Shelf position	Temperature (°C)	Baking time (min) (approx.)
Shortbread (sweet cookie)	Standard tray *	Top and bottom heating	3	140	20 ... 30
Small cakes	Standard tray *	Top and bottom heating	3	160	25 ... 35
Sponge cake	Round springform pan, 26 cm in diameter on wire grill **	Top and bottom heating	2	160	30 ... 45
Apple pie	Round black metal mould, 20 cm in diameter on wire grill **	Top and bottom heating	2	180	60 ... 75

Preheating is recommended for all food.

*These accessories may not be included with your product.

**These accessories are not included with your product. They are commercially available accessories.

Grill

Food	Accessory to be used	Shelf position	Temperature (°C)	Baking time (min) (approx.)
Meatball (veal) - 12 amount	Wire grill	4	250	20 ... 30
Toast bread	Wire grill	4	250	1 ... 4

It is recommended to preheat for 5 minutes for all grilled food.

Turn pieces of food after 1/2 of the total grilling time.

9 Maintenance and Cleaning

9.1 General Cleaning Information

General information

- Wait for the product to cool before cleaning the product. Hot surfaces may cause burns!
- The product should be thoroughly cleaned and dried after each operation. Thus, food residues shall be easily cleaned and these residues shall be prevented from burning when the product is used again later. Thus, the service life of the appliance extends and frequently faced problems are decreased.
- Some detergents or cleaning agents cause damage to the surface. Unsuitable cleaning agents are: bleach, cleaning products containing ammonia, acid or chloride, steam cleaning products, descaling agents, stain and rust removers, abrasive cleaning products (cream cleaners, scouring powder, scouring cream, abrasive and scratching scrubber, wire, sponges, cleaning cloths containing dirt and detergent residues).
- No special cleaning material is needed in the cleaning made after each use. Clean the appliance using dishwashing detergent, warm water and a soft cloth or sponge and dry it with a dry cloth.

- Be sure to completely wipe off any remaining liquid after cleaning and immediately clean any food splashing around during cooking.
- Refrain from washing any component of your appliance in a dishwasher unless otherwise stated in the user's manual.

For the hobs:

- Acidic dirt such as milk, tomato paste and oil may cause permanent stains on the hobs and components of the hob zones, clean any overflowed fluids immediately after cooling down the hob by turning it off.

Inox - stainless surfaces

- Stainless-inox surface may change colour in time. This is normal. After each operation, clean with a detergent suitable for the stainless or inox surface.
- Clean with a soft soapy cloth and liquid (non-scratching) detergent suitable for inox surfaces, taking care to wipe in one direction.
- Remove lime, oil, starch, milk and protein stains on the glass and inox surfaces immediately without waiting. Stains may rust under long periods of time.
- Cleaners sprayed/applied to the surface should be cleaned immediately. Abrasive cleaners left on the surface cause the surface to turn white.

Enamelled surfaces

- The oven must cool down before cleaning the cooking area. Cleaning on hot surfaces shall create both fire hazard and damage the enamel surface.
- After each use, clean the enamel surfaces using dishwashing detergent, warm water and a soft cloth or sponge and dry them with a dry cloth.
- If your product has an easy steam cleaning function, you can make easy steam cleaning for light non-permanent dirt. (See "Easy Steam Cleaning [► 53]").

Catalytic surfaces

- The side walls in the cooking area can only be covered with enamel or catalytic walls. It varies by model.

- The catalytic walls have a light matte and porous surface. The catalytic walls of the oven should not be cleaned.
- Catalytic surfaces absorb oil thanks to its porous structure and start to shine when the surface is saturated with oil, in this case it is recommended to replace the parts.

Glass surfaces

- Clean the appliance using dishwashing detergent, warm water and a microfiber cloth specific for glass surfaces and dry it with a dry microfiber cloth.
- If there is residual detergent after cleaning, wipe it with cold water and dry with a clean and dry microfiber cloth. Residual detergent may damage the glass surface next time.
- Under no circumstances should the dried-up residue on the glass surface be cleaned off with serrated knives, wire wool or similar scratching tools.
- You can remove the calcium stains (yellow stains) on the glass surface with the commercially available descaling agent, with a descaling agent such as vinegar or lemon juice.
- If the surface is heavily soiled, apply the cleaning agent on the stain with a sponge and wait a long time for it to work properly. Then clean the glass surface with a wet cloth.
- Discolorations and stains on the glass surface are normal and not defects.

Plastic parts and painted surfaces

- Clean plastic parts and painted surfaces using dishwashing detergent, warm water and a soft cloth or sponge and dry them with a dry cloth.
- Ensure that the joints of the components of the product are not left damp and with detergent. Otherwise, corrosion may occur on these joints.

9.2 Cleaning Accessories

Refrain from putting the product accessories in a dishwasher unless otherwise stated in the user's manual.

9.3 Cleaning the hob


Glass cooking surface

Follow the cleaning steps described for the glass surfaces in the "General cleaning information" section for the cleaning of glass cooking surface. You may complete your cleaning as per the information below for special cases.

- Sugar-based foods such as dark cream, starch and syrup should be cleaned immediately, without waiting for the surface to cool. Otherwise, the glass cooking surface may be permanently damaged.

Electric hobs

1. Turn off the hotplates and wait until they cool down.
2. If necessary, clean the hotplates with a cleaning agent (you can obtain cleaners/softeners from specialty stores).
3. Warm only for a few minutes after cleaning in order to have their top section dried.
4. Apply a thin layer of machine oil onto the top surface of the hotplate regularly in order to protect it.

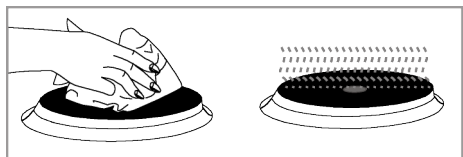

9.4 Cleaning the Control Panel

- When cleaning the panels with knob-control, wipe the panel and knobs with a damp soft cloth and dry with a dry cloth. Refrain from removing the knobs and gaskets underneath to clean the panel. The control panel and knobs may be damaged.
- While cleaning the inox panels with knob control, Refrain from using inox cleaning agents around the knob. The indicators around the knob can be erased.
- Clean the touch control panels with a damp soft cloth and dry with a dry cloth. If your product has a key lock feature, set

the key lock before performing control panel cleaning. Otherwise, incorrect detection may occur on the keys.

9.5 Cleaning the inside of the oven (cooking area)

Follow the cleaning steps described in the "General Cleaning Information" section according to the surface types in your oven.


Cleaning the side walls of the oven

The side walls in the cooking area can only be covered with enamel or catalytic walls. It varies by model. If there is a catalytic wall, refer to the "Catalytic surfaces" section for information.

If your product is a wire shelf model, remove the wire shelves before cleaning the side walls. Then complete the cleaning as described in the "General Cleaning Information" section according to the side wall surface type.

To remove the side wire shelves:

1. Remove the front of the wire shelf by pulling it on the side wall in the opposite direction.
2. Pull the wire shelf towards you to remove it completely.

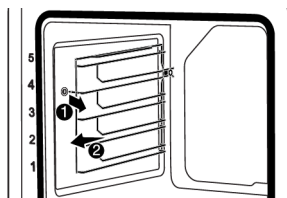

3. To reattach the shelves, the procedures applied when removing them must be repeated from the end to the beginning, respectively.

9.6 Easy Steam Cleaning


This allows cleaning of the dirt (not remaining for a long time) that is softened by the steam inside the oven and by the water droplets condensed in the internal surfaces of the oven easily.

1. Remove all accessories inside the oven.

2. Add 500 ml water into the tray and place it on the 2nd shelf of the oven.



Refrain from using distilled or filtered water. Use ready-made waters only.

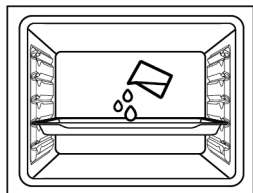

3. Set the oven to the easy steam cleaning operating mode and operate it at 100°C for 15 minutes.


Immediately open the door and wipe the oven interiors with a wet sponge or cloth. Steam will be released when opening the door. This may pose a risk of burns. Be careful when opening the door.

For stubborn dirt, clean the product using dishwashing detergent, warm water and a soft cloth or sponge and dry it with a dry cloth.



In the easy steam cleaning function, it is expected that the added water evaporates and condenses on the inside of the oven and the oven door in order to soften the light dirt formed in your oven. Condensation formed on the oven door may drip around when the oven door is opened. As soon as you open the oven door, wipe off the condensation.

After the condensation inside the oven, puddle or moisture may occur in the pool channel under the oven. Wipe this pool channel with a damp cloth after use and dry it.

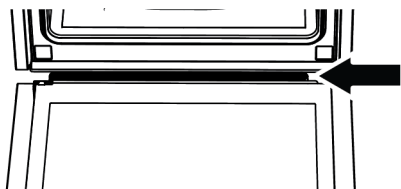


9.7 Cleaning the Oven Door

You can remove your oven door and door glasses to clean them. How to remove the doors and windows is explained in the sections "**Removing the oven door**" and "**Removing the inner glasses of the door**".


After removing the door inner glasses, clean them using a dishwashing detergent, warm water and a soft cloth or sponge and dry them with a dry cloth. For lime residue that may form on the oven glass, wipe the glass with vinegar and rinse.

Removing the oven door


1. Open the oven door.
2. Open the clips in the front door hinge socket on the right and left by pushing them downwards as shown in the figure.
3. Hinge types vary as (A), (B), (C) types according to the product model. The following figures show how to open each type of hinge.
4. (A) type hinge is available in normal door types.

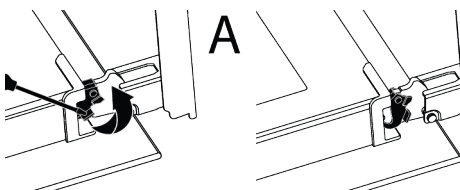


5. (B) type hinge is available in soft closing door types.

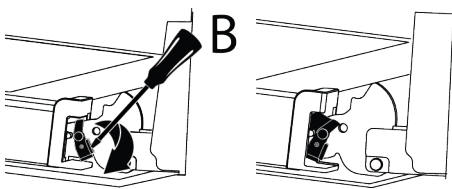

6. (C) type hinge is available in soft opening/closing door types.

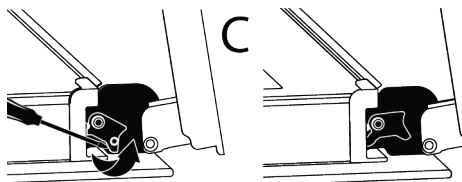

7. Get the oven door to a half-open position.

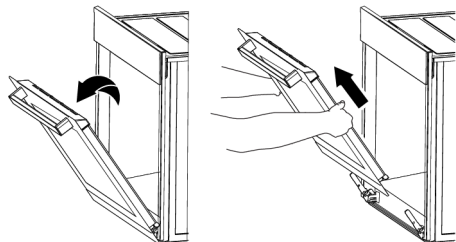

8. Pull the removed door upwards to release it from the right and left hinges and remove it.




To reattach the door, the procedures applied when removing it must be repeated from the end to the beginning, respectively. When installing the door, be sure to close the clips on the hinge socket.


9.8 Removing the Inner Glass of The Oven Door

Inner glass of the product's front door may be removed for cleaning.


1. Open the oven door.

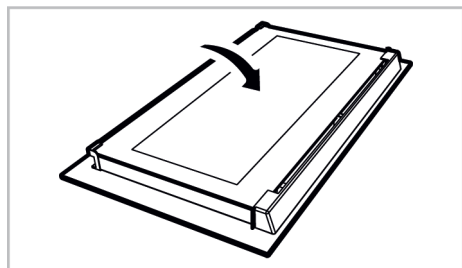

2. Remove the plastic component attached on the upper section of the front door by pulling it towards yourself.

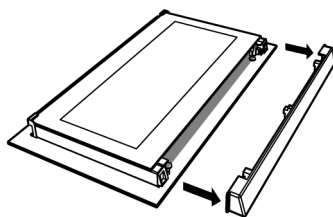

3. As shown in the figure, gently lift the innermost glass (1) towards "A" and then, remove it by pulling towards "B".

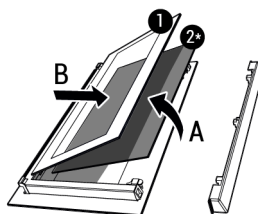

- 1 Innermost glass 2* Inner glass (it may not be available for your product)

4. If your product has an inner glass (2), repeat the same process to detach it (2).
5. The first step of regrouping the door is to reassemble the inner glass (2). Place the bevelled edge of the glass to meet the bevelled edge of the plastic slot. (If your product has an inner glass). Inner glass (2) must be attached to the plastic slot closest to the innermost glass (1).
6. While reassembling the innermost glass (1), pay attention to place the printed side of the glass on the inner glass. It is crucial to place the lower corners of the innermost glass (1) to meet the lower plastic slots.
7. Push the plastic component towards the frame until a "click" sound is heard.

9.9 Cleaning the Oven Lamp

In the event that the glass door of the oven lamp in the cooking area becomes dirty; clean using dishwashing detergent, warm water and a soft cloth or sponge and dry with a dry cloth. In case of oven lamp failure, you can replace the oven lamp by following the sections that follow.

Replacing the oven lamp

General information


- To avoid the risk of electric shock before replacing the oven lamp, disconnect the product and wait for the oven to cool. Hot surfaces may cause burns!
- This oven is powered by an incandescent lamp with less than 40 W, less than 60 mm in height, less than 30 mm in diameter, or a halogen lamp with G9 sockets with less than 60 W power. Lamps are suitable for operation at temperatures above 300 °C. Oven lamps are available from Authorised Services or licensed technicians. This product contains a G energy class lamp.
- The position of the lamp may differ from that is shown in the figure.
- The lamp used in this product is not suitable for use in the lighting of home rooms. The purpose of this lamp is to help the user see food products.
- The lamps used in this product must withstand extreme physical conditions such as temperatures above 50 °C.

If your oven has a round lamp,

1. Disconnect the product from the electricity.
2. Remove the glass cover by turning it counter clockwise.




3. If your oven lamp is type (A) shown in the figure below, rotate the oven lamp as shown in the figure and replace it with a new one. If it is type (B) model, pull it out as shown in the figure and replace it with a new one.

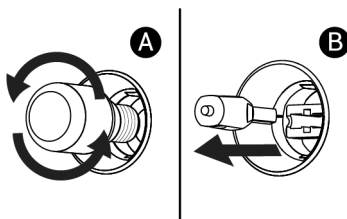


4. Refit the glass cover.

If your oven has a square lamp,

1. Disconnect the product from the electricity.
2. Remove the wire shelves according to the description.

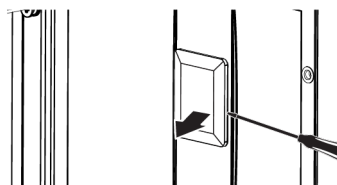

3. Lift the lamp's protective glass cover with a screwdriver. Remove the screw first, if there is a screw on the square lamp in your product.
4. If your oven lamp is type (A) shown in the figure below, rotate the oven lamp as shown in the figure and replace it with a new one. If it is type (B) model, pull it out as shown in the figure and replace it with a new one.

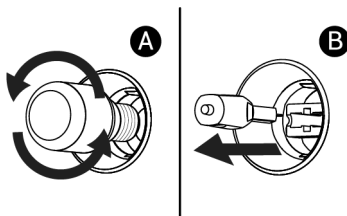

5. Refit the glass cover and wire shelves.

10 Troubleshooting

If the problem persists after following the instructions in this section, contact your vendor or an Authorized Service. Never try to repair your product yourself.

Steam is emanated while the oven is working.

- It is normal to see vapour during operation. >>> This is not an error.

Water droplets appear while cooking

- The steam generated during cooking condenses when it comes into contact with cold surfaces outside the product and may form water droplets. >>> This is not an error.

Metal sounds are heard while the product is warming and cooling.

- Metal parts may expand and make sounds when heated. >>> This is not an error.

The product does not work.

- Fuse may be faulty or blown. >>> Check the fuses in the fuse box. Change them if necessary or reactivate them.
- The appliance may not be plugged to the (grounded) outlet. >>> Check if the appliance is plugged in to the outlet.

- (If there is timer on your appliance) Keys on the control panel do not work. >>> If your product has a key lock, the key lock may be enabled, disable the key lock.

Oven light is not on.

- Oven lamp may be faulty. >>> Replace oven's lamp.
- No electricity. >>> Ensure the mains is operational and check the fuses in the fuse box. Change the fuses if necessary or reactivate them.

Oven is not heating.

- The oven may not be set to a specific cooking function and/or temperature. >>> Set the oven to a specific cooking function and/or temperature.
- No electricity. >>> Ensure the mains is operational and check the fuses in the fuse box. Change the fuses if necessary or reactivate them.

Additional Information for User Manual:	Technical information on the operating Low Power Modes pursuant to EU Regulation 2023/826	
Mode	POWER CONSUMPTION(WATT)	PERIOD(MINUTES)*
Off	0,3	-
Standby	-	-
Standby Mode with information or status display	-	-
Networked Standby	-	-

*:The period after which the equipment reaches automatically standby mode, off mode or networked standby in minutes and rounded to the nearest minute.

